


User Manual

impression[®] **X5 IP Bar 1000**



Document revision: 20240207-01

Fixture software version 1.1.3

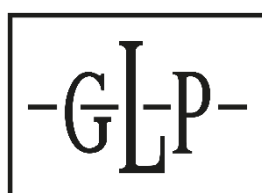

Document revisions

Revision number	Notes	Released
20240207-01	Added tilt disable to DMX Control/Settings channel (correction). Covers firmware v. 1.1.3	February 2024
20230928-01	First public release version Covers software version 1.1.3	October 2023

GLP® impression X5 IP Bar 1000 User Manual

© 2023-24 German Light Products GmbH. All rights reserved.

The marks 'GLP' and 'German Light Products' are trademarks registered as the property of German Light Products GmbH in Germany, in the United States of America and in other countries.

The information contained in this document is subject to change without notice. German Light Products GmbH and all affiliated companies disclaim liability for any injury, damage, direct or indirect loss, consequential or economic loss or any other loss occasioned by the use of, inability to use or reliance on the information contained in this document.

Manufacturer's head office:

German Light Products GmbH (GLP),
Industriestrasse 2, 76307 Karlsbad,
Germany
Tel (Germany): +49 7248 92719 – 0

Service & Support EMEA:
GLP, Industriestrasse 2,
76307 Karlsbad, Germany
Tel. (Germany): +49 7248 9271955
Email: support@glp.de
www.glp.de

Service & Support USA:
GLP USA, 16170 Stagg Street,
91406 Van Nuys, California
Tel (USA): +1 818 767 8899
Support (US): info@germanlightproducts.com
www.germanlightproducts.com

Table of Contents

1. Safety.....	5
Key to symbols.....	5
GLP Service and Support	6
Avoiding damage to the fixture	6
2. impression X5 IP Bar 1000 overview.....	7
3. Features.....	8
Control options.....	8
Powering on	8
Tilt	8
Fixture performance and speed options	9
Zoom.....	9
Main and Sub modules	9
Individual Segment or Pixel Control.....	9
Color mixing.....	10
iQ.Gamut	10
Mix Priority	10
White Point.....	11
Color temperature control (CTC)	11
Color Quality Control (CQC)	12
Magenta/Green Shift (M/G Shift)	12
Color wheel	12
Tungsten simulation	13
Shutter	13
Dimmer.....	14
Pattern control	14
Special/Control DMX channel	15
4. Fixture Settings	16
Color Mix modes	16
White point	18
iQ.Gamut	18
Dimming curves	19
Fan modes	19
Sub module mode / Sub fixture mode.....	20
Performance modes	20
PWM frequency	21
Pixel mirror.....	21
No signal	21
Tilt invert.....	22
Position feedback.....	22
Tilt disable.....	22
Display Mode	22
Display Orientation	23

Hibernation	23
Load User Settings	23
Information	23
Manual Control	23
Manual DMX	24
Service	24
Advanced Service	24
Load Factory Defaults	25
Factory Menu	25
5. Control panel	27
Default information screen	27
Using the control panel	29
Control button shortcuts	29
Live Diagnostics	30
Toggle Display Orientation	30
Error Messages	30
Loss of DMX signal	30
Service and maintenance	30
6. Setting up the control protocol	31
7. Control menus	32
Quick menu	32
Main menu	33
8. Error messages	38
9. Pixel layout	38
10. DMX control modes overview	39
11. DMX control channel layout	45
DMX Mode 1: Basic	46
DMX Mode 2: Normal (default DMX mode)	49
DMX Mode 3: Segments	57
DMX Mode 4: MultiPix Advanced	66
DMX Mode 5: MultiPix Compressed RGB	75
DMX Mode 6: MultiPix Compressed RGBL	77
12. Key to conversion of x and y coordinates	81
13. Color wheel specifications	82

1. Safety

Key to symbols

The following symbols are used in the product's user documentation:



Warning! Safety hazard.
Risk of severe injury or death.



Warning! Hazardous voltage.
Risk of lethal or severe electric shock.



Warning! See user documentation for important safety information.



Warning! Fire hazard.



Warning! Risk of eye injury.



Warning! Hot surface. Risk of burn injury.



Warning! Read the impression X5 IP Bar 1000 Quick Start and Safety Manual supplied with the fixture and available for download from www.glp.de before installing, operating or servicing the fixture. The Quick Start and Safety Manual contains important information for the safe use of impression X5 IP Bar 1000 fixtures. If you fail to read that information you may create a safety hazard with a risk of serious or lethal injury or damage.



If you have any doubts or questions about how to use the GLP® impression X5 IP Bar 1000 lighting fixture safely, contact your GLP supplier for assistance. Your GLP supplier will be happy to help.

The user documentation for impression X5 IP Bar 1000 fixtures consists of three documents:

- The **impression X5 IP Bar 1000 Quick Start and Safety Manual**, supplied with fixtures and available for download from www.glp.de. The Quick Start and Safety Manual contains important safety information and installation instructions that the installer and user must read. It also contains dimensions drawings and technical specifications for the fixture.
- The **impression X5 IP Bar 1000 User Manual**, available for download from www.glp.de. The User Manual explains features and control of impression X5 IP Bar 1000 fixtures.
- The **impression X5 IP Bar 1000 DMX Channel Index**, available for download from www.glp.de. The Channel Index is a separate document containing the DMX control channel layout and DMX commands available in the fixture. This information is also included in the User Manual.

The impression X5 IP Bar 1000 is intended for use by experienced professionals with the knowledge and skills to set up, operate, and maintain high-powered, remotely controlled lighting equipment safely and efficiently. These operations require expertise that may not be provided in this manual.

- Respect all warnings and directions given in the fixture's user documentation and on the fixture. Read the fixture's Quick Start and Safety Manual and familiarize yourself with the safety precautions that it contains. GLP and affiliated companies will take no responsibility for damage or injury resulting from disregard for the information in the user documentation.
- Check the GLP website at www.glp.de and make sure that you have the latest versions of the fixture's Quick Start and Safety Manual and this user manual.
- Check the fixture software version indicated on page 2 of this user manual and then use the fixture's control panel to check the version installed in the fixture. If the versions are not the same, the user manual may still cover the fixture, because software updates do not always affect the use of the fixture. However, it is possible that this manual does not match the fixture perfectly. Software release notes can help clarify this question. You can consult software release notes and download the correct version of this user manual on the GLP website if necessary.
- Make both the Quick Start and Safety Manual and this user manual available to all persons who will install, operate or service the fixture. Save both documents for future reference.
- If you have any questions about the safe operation of the fixture, please contact an authorized GLP distributor (see list of distributors at www.glp.de).

GLP Service and Support

Contact information for the nearest GLP Service and Support is available online at www.glp.de/en/service, by email at info@glp.de, or by telephone at the following numbers:

- GLP Germany: +49 (7248) 927 1955
- GLP N. America: +1 818 767-8899
- GLP UK: +44 1392 690140
- GLP Asia: +852 (3151) 7730
- GLP Nordic: +46 737 57 11 40

Avoiding damage to the fixture

The Quick Start and Safety Manual contains important information that is intended to help you avoid possible damage to the fixture from other light sources, during transportation, etc. Read that information before storing, transporting or using the fixture.

2. impression X5 IP Bar 1000 overview

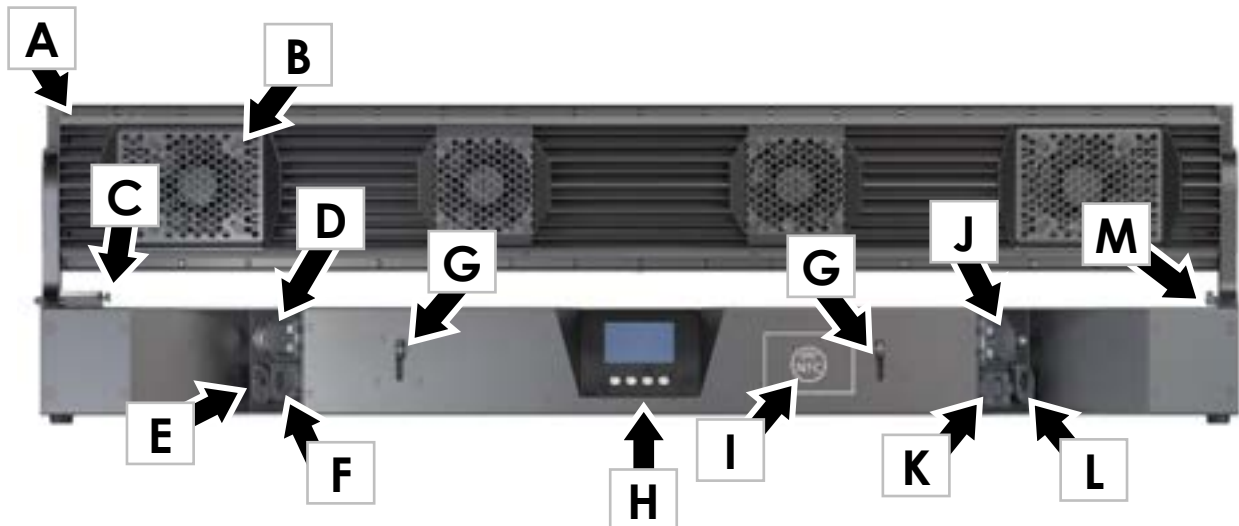


Figure 1. impression X5 Bar IP 1000 overview

- A – Head
- B – Air vent (x 4)
- C – Alignment pins button
- D – AC mains power IN (Neutrik powerCON TRUE1 TOP)
- E – Neutrik etherCON port A for future control options, fail-safe*
- F – DMX IN (5-pin XLR)
- G – Safety cable attachment points (retractable)
- H – Control panel with backlit display
- I – NFC Sensor
- J – AC mains power THRU (Neutrik powerCON TRUE1 TOP)
- K – Neutrik etherCON port B for future control options, fail-safe*
- L – DMX THRU (5-pin XLR)
- M – Tilt lock

**Additional control options are in preparation for a future firmware release*

3. Features

The impression X5 IP Bar 1000 is a powerful IP65-rated LED-based linear format lighting fixture from GLP. It features a tilting head with GLP's patented fast tilt movement system.

The fixture contains 18 x 40 Watt RGBL LED sources. Each source features smooth, full range color mixing with a homogenized Fresnel lens. The fixture also has motorized fast-action zoom.

The fixture offers a powerful multi-layer color and zoom effects engine.

Fixtures feature an alignment system that lets you build unbroken lines of pixels, and power and data can be daisy-chained for ease of installation. The impression X5 IP Bar 1000 can be placed upright on a level surface or suspended from a suitable structure as described in the fixture's Quick Start and Safety Manual.

A filter slide-in system with mounting channels on the front of the head allows optical accessories from GLP (such as an asymmetric beamshaper filter) to be installed in seconds without the use of tools.

Control options

The impression X5 IP Bar 1000 is compatible with DMX 512 and RDM control protocols. Other control options via Ethernet are currently in preparation for inclusion in a future firmware release.

The fixture also features GLP iQ.Mesh and GLP's FPO (Flexible Protocol Option) Port with a LumenRadio CRMX module supplied installed in the fixture as standard. The GLP iQ.Mesh Module allows easy configuration, control, service and maintenance via the GLP iQ.Service App. Other FPO modules can be supplied on request – GLP Service can give details.

Powering on

When power is applied to the fixture and no valid DMX signal is present, the head moves automatically to its home position (tilt center).

Tilt

The impression X5 IP Bar 1000 has motorized tilt movement with coarse and fine control channels.

Direction of tilt movement

With the fixture standing on the ground, increasing the tilt DMX value moves the head towards the front from its home position. Tilt direction can be reversed using the **Fixture Settings → Tilt Invert** setting (see 'Tilt invert' on page 22) or via DMX on the Special/Control channel. This can be useful when setting up symmetrical movement in multiple fixtures.

Tilt position feedback and self-correction

The fixture has a tilt position feedback and self-correction system that brings the head back to its correct position if it was unintentionally moved. When correcting tilt, the fixture at first tries twice to move to the correct position. If it cannot move to this position, it waits for a short period and then tries again. Position feedback is automatically disabled for a short time if you press one of the control panel buttons. This feature lets an operator move the head manually. Tilt remains disabled while you are using the fixture's control panel.

Position feedback can also be set to constantly disabled using the Fixture Settings options. See 'Tilt disable' on page 22.

Fixture performance and speed options

You can adjust the speed (and noise level) of tilt and zoom movement by selecting from three different performance options (see 'Performance modes' on page 20).

Zoom

The impression X5 IP Bar 1000 has motorized zoom control that lets you vary the beam angle from spot to flood as the DMX value increases.

You can adjust the speed (and noise level) of zoom movement, as well as the speed of all other mechanical effects, by selecting from three different performance options (see 'Performance modes' on page 20).

Main and Sub modules (Main and Sub fixtures)

Some control modes divide the fixture into two or more modules (Main module and Sub modules). For example, Control Modes 2-4 divide the fixture into:

- Main module (Layer 1 = one RGB(L) Wash fixture)
- Sub module (Layer 2 = pattern engine with segment or individual pixel control).

The Sub module has its own intensity and shutter channels. Professional controllers will handle this setup in a smart multi-fixture profile.

The **Sub module mode** setting lets you decide whether the Sub module should be subordinate to or independent of the Main module (see 'Sub module mode / Sub fixture mode' on page 20).

Individual segment or pixel control

The impression X5 IP Bar 1000 provides eighteen individually controllable pixels. Each pixel cell houses a 40 W RGBL LED that can be controlled individually in intensity and color to create dynamic effects and pixel mapping.

The fixture's different DMX control modes offer different options for working with the individual segments or pixels.

In nearly all DMX modes, the Main module gives color mixing control of all eighteen pixels together as one segment.

- **Mode 1 (Basic)** provides a Main module with color mixing control of all pixels together as one segment.
- **Mode 2 (Normal)** adds a Sub module as a second layer with pattern effects and color mixing of all pixels as one segment.
- **Mode 3 (Segment)** adds Sub modules as a second layer with pattern effects and color mixing of three segments: the inner, middle and outer rings.
- **Mode 4 (Multipix Advanced)** adds Sub modules as a second layer with pattern effects and RGB color mixing of each individual pixel.
- **Mode 5 (Multipix Compressed RGB)** is a pixel mapping mode which offers the main overall control options plus RGB color mixing of each individual pixel.
- **Mode 6 (Multipix Compressed RGBL)** is a pixel mapping mode which offers the main overall control options plus RGBL color mixing of each individual pixel.

Color mixing

The fixture's Main module features 16-bit color mixing with RGB, RGBL or x;y (CIE 1931) Color Mix control options. See 'Color Mix modes' on page 16.

Note: The Color Mix mode of the Sub module(s) is always RGB. For more details, see 'Color Mix modes' on page 16.

iQ.Gamut

iQ.Gamut is a new LED calibration technology from GLP that defines the color gamut for the color mix channels. You can select one of a range of calibrated iQ.Gamuts for the fixture to work within. This feature can be useful if you want to reproduce correct colors or avoid TV camera clipping. See 'iQ.Gamut' on page 18.

Mix Priority

The Mix Priority channel defines how the color mixing output of the Main module (Layer 1) and the color mixing output of the Sub module(s) (Layer 2) are merged together – or which value has higher priority. This lets you switch between the layers or create special effects using both layers.

The Mix Priority channel gives the following options:

- **Main + Sub (HTP)** – The fixture takes whichever color value of the Main module or Sub module is highest and uses that value to determine the output color (Highest Takes Priority).
- **Main Only** – The Sub module color value is ignored. The fixture uses the color value of the Main module.
- **Sub Only** – The Main module color value is ignored. The fixture uses the color value of the Sub module.

- **Main + Sub additive** – The Sub module color value is added to the Main module color value. The fixture uses the sum of both values.
- **Main - Sub subtractive** – The Sub module color value is subtracted from the Main module color value.
- **Sub - Main subtractive** – The Main module color value is subtracted from the Sub module color value.
- **TrueColor Main over Sub Snap** – Sub module color stays in the background. Main module color has higher priority and will not mix with Sub module color. As soon the Main module color value is greater than zero, Sub module color blacks out and the fixture uses the Main module color.
- **TrueColor Sub over Main Snap** – Main module color stays in the background. Sub module color has higher priority and will not mix with the Main module color. As soon as Sub module color value is greater than zero, Main module color blacks out and the fixture uses Sub module color.
- **TrueColor Main over Sub Crossfade** – Sub module color stays in the background. Main module color has higher priority. If you fade in a Main module color, Sub module color will crossfade to the Main module color.
- **TrueColor Sub over Main Crossfade** – Main module color stays in the background. Sub module color has higher priority. If you fade in a Main module color, Sub module color will crossfade to the Main module color.
- **Main to Sub Crossfade** – Manually crossfading from Main module color only → Main and Sub module color (HTP) → Sub module color only.

White Point

The white point is the default white that is obtained when the shutter is opened. The impression X5 IP Bar 1000 offers a choice of fixed white points in RGB Color Mix Mode, allowing convenient use in different environments. For details of setting the white point, see 'White Point' on page 18.

Color temperature control (CTC)

In addition to the choice of default fixed white point, the fixture offers Color Temperature Correction (CTC) in all three color mixing control modes (RGB, RGBL and x;y). The CTC Channel allows a temporary change of white point and offers a smooth shift between whites from 10.000 K to 2500 K following the black body line.

Depending on the selected Color Mix Mode (RGB, RGBL or x;y), if you select a color temperature on the CTC channel, the fixture will no longer use the specific open color and will instead use the selected color temperature.

If you select a color temperature on the CTC channel, it is still possible to manipulate the color temperature using the RGB and RGBL channels.

Note: To obtain the desired color temperature on the CTC channel, you must set all Color Mix channels to 100%. If they are not at 100%, the system will mix color relative to the selected white point of the CTC channel.

The CTC channel affects all the fixture's modules. Setting the CTC channel to a specific color temperature will affect the open white of the Main module and Sub modules.

Color Quality Control (CQC)

The CQC channel lets you modify the spectral mix of the white output in order to achieve a balance between better color rendering or higher output intensity. The following options are available:

- **High Quality (HQ)** deploys multiple LEDs to create a richer light spectrum that gives improved color rendering but also slightly lower output. Color is mixed with priority given to the best white color rendering quality. Saturated colors will have maximum saturation at DMX 000 and will smoothly become unsaturated until they reach 0% saturation (= white) at DMX value 127.
- **High Output (HO)** gives higher output intensity but reduced color rendering performance. Color is mixed with priority given to the highest output in white. Saturated colors will have maximum saturation at DMX 255 and will smoothly become unsaturated until they reach 0% saturation (= white) at DMX value 128.

While using white light, the CQC channel lets you change between white with priority on high-quality color rendering and white with priority on highest output. Additionally, the CQC channel lets you smoothly desaturate colors. If you have set a saturated color in the color mix, the CQC channel lets you smoothly desaturate the color from saturated to fully unsaturated (i.e. white).

Note: The CQC channel affects all the fixture's modules. Setting the CQC channel to a specific value will affect the colors of the Main module and Sub modules.

*Note: The **HO** and **HQ** CQC options only affect the color mix if the fixture is in RGB or x;y Color Mix mode. In all other Color Mix modes this setting has no effect.*

Magenta/Green Shift (M/G Shift)

The Magenta/Green Shift channel lets you move the color coordinate of a white point, a mixed color or a selected CTC color along a vertical line on the color temperature curve in all three Color Mix modes. The corresponding white point is either shifted towards Green or Magenta.

If M/G Shift is enabled, it immediately affects all mixed colors as well as the color temperature that is selected on the CTC channel. It has no effect on the colors of the virtual color wheel.

Note: The M/G Shift channel affects the entire fixture. Setting the M/G Shift channel to a specific value will affect the output of the Main module and Sub modules.

Color wheel

The impression X5 IP Bar 1000 features a virtual color wheel channel that gives quick access to a wide range of LEE-referenced colors in all three Color Mix modes. Color wheel color presets are always mixed with the best available spectrum. Color filter color coordinates are based on a Source C (daylight) light source.

Besides static color presets, the color wheel channel also offers continuous color scrolling through HSI colors. When set to HSI Scroll, the fixture runs through saturated HSI colors with variable speed from slow to fast.

The crossfade time of a color change is relative to the speed: at slow speeds colors crossfade smoothly and at fast speeds colors snap.

If a color coordinate is outside the possible color gamut of the light source, the fixture tries to match the target color as closely as possible.

Note: Color wheel color presets have higher priority than the Color Mix, CTO and M/G Shift channels.

The virtual color wheel channel must be set to DMX 000 in order to use normal RGB, RGBL or x:y color mixing.

Tungsten simulation

When a tungsten lamp is dimmed, there is a small delay in intensity changes and there is a color shift along the black body line. The tungsten simulation channel allows the user to select between different tungsten options in all three Color Mix modes.

The first part of the Tungsten channel offers standard tungsten features with fixed color temperature, red shift and delayed intensity changes. The color temperature as well as the color shift and inertia of the selected light source are fully simulated. Tungsten mode has higher priority than the color wheel or CTC.

The second part of the Tungsten channel lets you apply one of the corresponding tungsten effects (inertia and intensity) to the currently set mixed color or currently selected color temperature on the CTC channel.

Note: The Tungsten simulation channel affects the entire fixture. Setting the Tungsten channel to a specific value will affect the output of the Main module and Sub module.

Shutter

The fixture's shutter channel offers continuous blackout, continuous open and a range of intensity effects.

Depending on the selected Sub Module Mode, the shutter channel of the Main module channel group acts as either a master shutter or as the shutter channel of the Main module independently of the Sub module.

The following shutter effects are available:

- **Single flash** performs exactly one single flash with each value change within this DMX value slot.
- **Pulse** dims up and down smoothly with the same fade-in and fade-out times. Speed can be adjusted from slow to fast.
- **Pulse open** fades in and then snaps to blackout. Speed can be adjusted from slow to fast.
- **Pulse close** fades out and then snaps to full. Speed can be adjusted from slow to fast.

- **Strobe double flash** provides a quick double flash. Speed can be adjusted from slow to fast.
- **Strobe pixel random** (only available when the fixture is set to a DMX mode with individual pixel control) strobes individual pixels at random to give a kind of sparkling effect. Speed can be adjusted from slow to fast.
- **Strobe random** strobes all of one fixture's pixels together at random intervals, allowing a random strobe between multiple fixtures. Speed can be adjusted from slow to fast. *Note that the random effect across multiple fixtures really is random!*
- **Strobe** strobes all of one fixture's pixels together and also perfectly synchronizes the strobe in multiple fixtures so that all the fixtures flash at exactly the same time. Speed can be adjusted from slow to fast.

Note: Depending on the selected Sub Module Mode, the dimmer and shutter channels of the Sub modules can operate independently of or subordinately to the dimmer and shutter channels of the Main module.

Dimmer

The electronic dimming effect provides smooth 16-bit dimming of the Main module and Sub module. Three dimming curves with different dimming characteristics are available. See 'Dimming curves' on page 19.

Pattern control

The impression X5 IP Bar 1000 offers a wide range of static and dynamic pre-programmed FX patterns on the Sub modules. The Sub module color control channels define the color of the pattern effects.

A static pattern is a fixed pattern with only one pattern step. This allows you a very quick selection of a non-dynamic effect. It has active and inactive pixels. Each active pixel shows the selected pattern color while each inactive pixel is fully transparent.

A dynamic pattern is a sequence of multiple pattern steps and has active and inactive pixels. Each active pixel shows the selected pattern color while each inactive pixel is fully transparent. You can set pattern steps to automatically change continuously (Pattern Speed) or you can directly select pattern steps (Pattern Index).

Note: The Mix Priority channel lets you decide how the output of the Main module and the Sub module (pattern or pixel mapping) should be merged.

Pattern selection

The pattern selection channel offers a choice of 59 static patterns, 50 dynamic patterns and 11 special patterns. The dynamic patterns offer multiple pattern steps for individual step selection or continuous pattern step chasers.

Pattern 0 (DMX 000) is the idle pattern and just sets all pixels to active.

The Random Pixel FX pattern at the end of the Pattern Select channel randomly selects pixels to create an attractive sparkle effect.

Pattern speed/index

As a dynamic pattern is a sequence of multiple pattern steps, you can select either:

- an automatic clockwise or counterclockwise continuous run-through of the pattern steps with different speeds (dynamic speed control = DMX values 002 ... 127), or
- one of the available specific pattern steps (static indexing = DMX values 128 ... 255).

Note: Bear in mind that different patterns can have a different number of pattern steps. This can affect synchronization between fixtures, for example, if you run different patterns in multiple fixtures.

Pattern step crossfading

The Pattern Step Crossfading channel lets you choose how one step in a pattern should change into the next step. This change can be a snap, a normal crossfade or a fade with tail (quick fade in and variable long fade out).

Pattern transition

The Pattern Transition channel lets you choose how Pattern A should change into Pattern B. This change can be a snap, a soft crossfade, a Fade Over Blackout (FOB) or Fade Over Full (FOF).

Fixture total number and fixture position

The Fixture Total Number (or Fixture Quantity) and Fixture Position channels let you set up FX pattern chases and synchronized pattern action in multiple fixtures when you activate dynamic FX. The impression X5 IP Bar 1000 can manage patterns in fixture groups containing up to 255 fixtures.

The Fixture Total Number channel lets you define the total number of fixtures in the fixture group that the pattern should run on.

The Fixture Position channel lets you define the fixture's position in the fixture group.

Special/Control DMX channel

The Special/Control DMX channel lets you change fixture settings and perform a fixture reset from the control desk (a possibility that can be very useful during a show or for a specific scene). To apply a command on the Special/Control channel, you must hold the command for the time indicated in the DMX channel index section at the end of this user manual.

To trigger a reset using the Special/Control channel, you must send the DMX value for this function for 3 seconds. If you want to trigger an additional reset using the Special/Control channel, you must first move away from the Reset DMX value and then return to this value. This requirement to change DMX values eliminates the risk of the fixture entering an unwanted Reset loop if it is patched wrongly.

Note: Most of the fixture settings available in the fixture's control menus or on the Special/Control DMX channel are also available via RDM.

4. Fixture Settings

The settings described in this chapter let you customize the impression X5 IP Bar 1000. Settings can be available in the control panel, via DMX and/or via RDM.

Color Mix modes

The Color Mix Mode setting offers three different options for color mixing:

RGB Mode

RGB Mode mixes color of the main and sub module(s) using Red, Green and Blue channels. The Lime LED is mixed automatically using the fixture's internal GLP iQ.Gamut algorithm.

RGB Mode offers a clean default white light at open which is considered to be the white point (RGB at 100%).

When the **Color Mix Mode** is set to **RGB**, the different DMX Modes have the following functionality:

- Mode 1 – Basic
 - Main Layer: RGB control of all pixels as one group with Lime mixed automatically. Lime Channel has no function.
- Mode 2 – Normal
 - Main Layer: RGB control of all pixels as one group with Lime mixed automatically. Lime Channel has no function.
 - Sub Layer: RGB control of all pixels as one group with Lime mixed automatically.
- Mode 3 – Segment
 - Main Layer: RGB control of all pixels as one group with Lime mixed automatically. Lime Channel has no function.
 - Sub Layer: RGB control of each segment with Lime mixed automatically.
- Mode 4 – Multipix
 - Main Layer: RGB control of all pixels as one group with Lime mixed automatically. Lime Channel is dead.
 - Sub Layer: RGB control of each pixel with Lime mixed automatically.
- Mode 5 – Multipix Compressed RGB
 - RGB control of each pixel with Lime mixed automatically.
- Mode 6 – Multipix Compressed RGBL
 - RGBL control of each pixel.

RGBL Mode

RGBL Mode mixes color of the main module using Red, Green, Blue and Lime channels. The colors of the Sub module(s) are mixed with RGB only - always without Lime. The color gamut is still calibrated to the impression X5 range, but the white point (open) is not adjusted to the black body line and will show a white that is mixed using 100% RGBL.

*Note: The **HO** and **HQ** CQC options are not available in RGBL Mode.*

When the **Color Mix Mode** is set to **RGBL**, the different DMX Modes have the following functionality:

- Mode 1 – Basic
 - Main Layer: RGBL control of all pixels as one group with individual Lime control.
- Mode 2 – Normal
 - Main Layer: RGBL control of all pixels as one group with individual Lime control.
 - Sub Layer: RGB control of all pixels as one group without automatically mixed Lime. Lime is always 0%.
- Mode 3 – Segment
 - Main Layer: RGBL control of all pixels as one group with individual Lime control.
 - Sub Layer: RGB control of each segment without automatically mixed Lime. Lime is always 0%.
- Mode 4 – Multipix
 - Main Layer: RGBL control of all pixels as one group with individual Lime control.
 - Sub Layer: RGB control of each pixel without automatically mixed Lime. Lime is always 0%.
- Mode 5 – Multipix Compressed RGB
 - RGB control of each pixel with Lime mixed automatically.
- Mode 6 – Multipix Compressed RGBL
 - RGBL control of each pixel.

x:y Mode

x:y Mode lets you send x:y color coordinates to the fixture via DMX. The internal color algorithm mixes the four LED colors perfectly to match the x:y color coordinates.

In x:y Mode, white point setting is disabled. CTC channel values overwrite x:y values.

When the **Color Mix Mode** is set to **x:y**, the different DMX Modes have the following functionality:

- Mode 1 – Basic
 - Main Layer: x:y control of all pixels as one group
- Mode 2 – Normal
 - Main Layer: x:y control of all pixels as one group.
 - Sub Layer: RGB control of all pixels as one group with automatically mixed Lime.
- Mode 3 – Segment
 - Main Layer: x:y control of all pixels as one group.
 - Sub Layer: RGB control of each segment with automatically mixed Lime.
- Mode 4 – Multipix
 - Main Layer: x:y control of all pixels as one group
 - Sub Layer: RGB control of each pixel with automatically mixed Lime.

- Mode 5 – Multipix Compressed RGB
 - RGB control of each pixel with automatically mixed Lime.
- Mode 6 – Multipix Compressed RGBL
 - RGBL control of each pixel.

White point

The white point is the default white that is obtained when the shutter is opened. The impression X5 IP Bar 1000 offers a choice of fixed white points in RGB Color Mix Mode, allowing convenient use in different environments. The following fixed white points (color temperatures) are available:

- **8000 K** (effect light)
- **6500 K** (daylight – default)
- **5600 K** (TV and studio)
- **4200 K** (CDM)
- **3200 K** (tungsten)

If a fixed white point is enabled, the fixture mixes colors with reference to it. GLP iQ.Gamut navigates through the color space using the preferred Color Mode color mixing method.

Note: Fixed white point settings are only valid for RGB mode using the iQ.Gamut FULL. If any of the other defined color gamuts is selected, the defined white point of the selected color gamut is applied.

iQ.Gamut

iQ.Gamut is a new LED calibration technology from GLP that defines the color gamut for the color mixing channels. You can select one of a range of calibrated iQ.Gamuts for the fixture to work within. This feature can be useful if you want to reproduce correct colors or avoid TV camera clipping. The iQ.Gamut setting will only affect the color mix if the fixture is in **RGB** Color Mix Mode. In all other Color Mix modes this setting has no effect.

The following iQ.Gamut settings are available:

- **FULL** (default) – Color mixing is calibrated to the impression X5 color gamut and referenced to the selected fixed white point. This setting gives the best results with applications where deep saturated colors are needed.
- **Rec.2020** – Color mixing is matched to the defined Rec.2020 gamut including its white point. This setting gives best results for UHD TV applications and avoids color clipping.
- **Rec.709** – Color mixing is matched to the defined Rec.709 gamut including its white point. This setting gives best results for HD TV applications and avoids color clipping.
- **DCI P3.6** – Color mixing is matched to the defined DCI P3.6 gamut including its white point.

Dimming curves

The electronic dimming effect provides smooth 16-bit dimming of the Main module and Sub modules. The following three dimming curves are available:

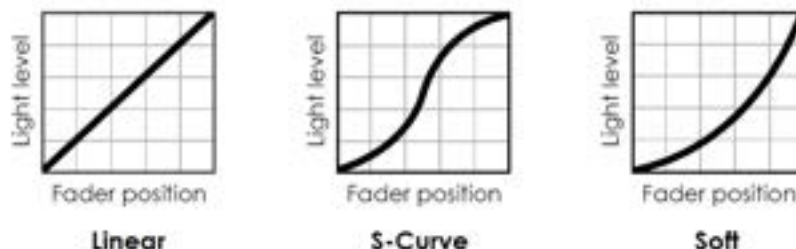


Figure 2. Dimming curves

- The **Linear** setting gives a dimming curve that the eye perceives as linear.
- The **S-Curve** setting gives finer control at lower light levels and at higher light levels, with coarser control at medium light levels.
- The **Soft** setting gives finer control at lower light levels, where the eye is most sensitive to changes in light intensity, and coarser control at higher light levels.

Note: Depending on the selected Subfixture Mode, the dimmer and shutter channels of the Sub modules can operate independently of or subordinately to the dimmer and shutter channels of the Main module.

Fan modes

Five cooling fan modes let you give priority to lowest fan noise or most powerful cooling:

- **Regulated** mode gives priority to light output and only operates fans as necessary. If the fixture is blacked out, fans switch off after some seconds. Only the fans that are necessary operate, and they run at minimum speed. When light output intensity is increased, temperature regulation increases fan speed to the level necessary to keep the fixture at optimum temperature.

If light output is set to maximum intensity but the fans can keep the fixture at optimum temperature, there is no regulation of light intensity. If the fixture begins to exceed optimum temperature and the fans are running at maximum speed, light intensity is limited until optimum temperature can be maintained.

- **High** mode sets the fixture to give maximum light output and suits operation in high ambient temperatures. Fans are set to constant operation at high speed. Light output intensity is limited smoothly if it becomes necessary in order to keep fixture temperature at optimum level.

You can also use **High** mode to cool down a fixture quickly after a period of operation or to help remove dust from cooling fans.

- **Medium** mode sets fans to constant operation at medium speed. Light output intensity is reduced to a level where it will normally remain constant at ambient temperatures of up to 45° C (113° F). Intensity is smoothly limited further if it becomes necessary in order to keep fixture temperature at optimum level.

- **Low mode** sets fans to constant operation at low speed and is optimized for minimum noise. Light output intensity is reduced to a level where it will normally remain constant at ambient temperatures of up to 30° C (86° F). Intensity is smoothly limited further if it becomes necessary in order to keep fixture temperature at optimum level.
- **Minimum** mode operates as follows:
 - If the fixture is at blackout, all unnecessary fans are shut down completely and only fans that are absolutely necessary remain active. These fans operate at low speed.
 - As soon as the fixture emits light, other necessary fans may start but will stay at minimum speed. Light output is limited.

Note: In all fan modes, if fixture temperature reaches a dangerous level, the LEDs are shut down for a period until the fans have brought the temperature down to a safe level.

Sub module mode / Sub fixture mode

The impression X5 IP Bar 1000 offers two options for controlling the Main module and Sub modules:

- **Normal** – In this mode, all Sub module channels are subordinate to the Main module channel group. This means that the intensity and shutter of the Main module act as master intensity and master shutter for the whole fixture.
- **Independent** – In this mode, the Sub module channel group can be controlled independently of the Main module channel group and acts as an independent fixture.

Note that no matter which Sub module mode setting you select:

- The **Mix Priority** channel is still active and will affect how the two dependent or independent fixtures are mixed.
- Some of the general color management channels of the Main module such as CTC, CQC, M/G-Shift and Tungsten simulation will still affect the Sub module.

Performance modes

You can select between three different settings for the movement speed of the fixture's tilt movement and zoom effect:

- **Normal** sets movement to give an optimum balance between speed, quietness and smoothness. **Normal** is the default setting.
- **Fast** sets movement to maximum speed. This setting gives very fast movement but can result in higher noise levels.
- **Smooth** optimizes the smoothness of the effects and gives lowest-noise performance. This setting gives extremely low noise and smooth performance, but movement will be slower than in **Normal** mode.

PWM frequency

This setting lets you select between different LED PWM frequencies for different applications and adjust frequencies to give the best results at different camera shutter frequencies. Changing the PWM frequency can improve dimming performance or help avoid flicker and beat frequencies in video images.

The following PWM settings are available:

- **Low** – PWM frequency is fixed at a lower level, giving best dimming results.
- **Optimum** (default) – PWM frequency is set to a level which offers a good compromise between best dimming results and avoiding flicker.
- **High1** – PWM frequency is set to a higher level.
- **High2** – PWM frequency is set to a higher level than High 1.
- **Max** – PWM frequency is set to the highest possible level. Use this setting for slow motion video or high speed camera applications. Dimming resolution at this setting is not as good as the other PWM settings.

Note: A higher PWM frequency may affect dimming performance. The PWM frequency setting is stored in the fixture and is not affected by cycling power off and on. However, it will be affected if you use the Factory Defaults command in the control menus. As a rule, you should set all the fixtures in an installation to the same PWM frequency in order to ensure the same performance.

Pixel mirror

The **Pixel mirror** setting lets you flip the fixture's pixel layout:

- **Off** gives the standard pixel layout (see 'Pixel layout' on page 38). Pixel 01 is at the Power and DMX THRU connectors end of the fixture and pixel 18 is at the Power and DMX IN connectors end of the fixture.
- **y-mirror** flips the pixel layout over the y-axis. Pixel 18 is at the Power and DMX THRU connectors end of the fixture and pixel 01 is at the Power and DMX IN connectors end of the fixture.

No signal

The **No signal** settings let you manage how the fixture behaves if no DMX signal is present (if the fixture is being controlled by DMX but the DMX signal stops, or if you apply power to the fixture when no DMX signal is present):

- **Blackout** sets the fixture to black out whenever it is not receiving a DMX signal. This is the default setting.
- **Hold** sets the fixture to continue using the last DMX values it received.
- **Scene (Stand-alone)** sets the fixture to play its stored stand-alone scene (see **Capture DMX Values** below) when the fixture is not receiving a DMX signal. If no stand-alone scene is stored in memory, the fixture will black out.

If the fixture is set to **Scene (Stand-alone)** and if a stand-alone scene has been stored in its memory using the **Capture DMX Values** command, it will display its stand-alone scene at all times when it is powered on but not receiving a DMX signal. You can therefore use this setting if you want fixtures to automatically start stand-alone operation when you apply power to them.

- **Capture DMX Values** takes a snapshot of the DMX values that are currently being received and stores them in the fixture's memory as its captured scene. The fixture will display this scene if it is set to **Scene (Stand-alone)** (see above) and is not receiving a DMX signal.

Tilt invert

Increasing the tilt DMX value moves the head from its home position towards the front of the fixture.

Changing the Tilt invert setting to ON inverts the tilt direction so that increasing the tilt value turns the head towards the back of the fixture.

Position feedback

Tilt auto-correction (position feedback) is normally enabled (ON). Changing this setting to OFF will disable the position feedback and auto-correction. If you need to return tilt to its correct position, you must perform a reset.

Tilt disable

Tilt disable is normally OFF. Changing the Tilt disable setting to "Current disable" de-activates tilt by disabling the tilt motor current.

Note: When changing from ON back to OFF to re-enable tilt movement, you must carry out a reset before you can operate tilt normally.

Display Mode

Gives different behavior options for the display in the fixture's control panel. This can be helpful in case of errors or during service operations. Three settings are available:

- **Auto** (default): the display automatically switches off after a few seconds if the fixture is receiving a valid control signal and has not detected an error. If the fixture is not receiving a valid control signal, the display will flash. If the fixture has detected an error, the display remains constantly on and shows the error.
- **On**: The display stays on constantly. This setting can be useful if you are configuring or servicing the fixture.
- **Off**: The display will automatically switch off after a few seconds even if the fixture is not receiving a valid control signal or if it has detected an error. Pressing any button turns on the display again.

Display Orientation

Lets you select **Normal**, **Upside-down** or **Auto** control panel display orientation.

If **Display Orientation** is set to **Auto**, changing the display orientation by pressing UP and DOWN at the same time will only change the display orientation until the next power cycle.

Hibernation

Lets you put the fixture into energy-saving mode and disables all electronic components apart from the DMX receiving module.

You can take the fixture out of hibernation mode with a power off/on cycle, via RDM or using the Special / Control DMX channel. If you do this, the fixture will perform a fixture reset before returning to normal operation.

Load User Settings

Lets you load different custom fixture configurations or return the fixture to the default fixture settings.

To save a custom setting preset from 1 to 3, see **Service → Advanced → Save_Settings**.

- **Load User Settings 1 to 3** loads one of three specific custom fixture settings. You must confirm the function for 3 seconds before the new settings are loaded (see **Fixture Settings → Load User Settings**).
- **Save User Settings 1 to 3** saves the current fixture settings as a set of user settings. You must confirm the function for 2 seconds in order to save the settings as one of the three custom settings presets (see **Service → Advanced → Save User Settings**).

*Note: The **Load User Setting Presets** and **Load User Setting Defaults** commands will only affect settings in the **Fixture Settings** group and will not affect DMX Address, Control Mode, Protocol Type, IP Settings, etc. This helps avoid loss of communication with the controller.*

Information

The **Information** submenu provides readouts of all relevant information such as the error list if any errors have been detected, the fixture's serial number, firmware version, device info, device hours counter, power cycles counter, DMX input monitor, signal quality etc.

Manual Control

This submenu gives different options for resetting the fixture manually. It can be helpful for service or stand-alone issues.

- **Reset All:** Performs a full fixture reset to initialize all features and effects.
- **Reset Tilt:** Resets tilt only to initialize the tilt position.
- **Reset Head:** Resets all the features in the head.

Manual DMX

Gives individual control of the fixture using the fixture user interface. The menu timeout function is disabled as long this menu is open.

- **Manual Control:** Manually sets a DMX value for each function.
- **Reset Manual values:** Resets all manual control values to default.

External DMX values will always have higher priority than manual control commands. Disconnect the fixture from the data source when using manual control.

Note: When entering manual control, be prepared for the fixture to start moving.

Service

The **Service** menu is split into two levels: **Service** and **Service Advanced**. The **Service Advanced** level is for trained technicians only. Read the information below carefully before entering this level.

The Service menu contains the following items:

- **Live Diagnostic:** Calls up an overview of all main fixture information, signal quality and settings. This can be helpful while troubleshooting or talking to GLP Service.
- **iQ.Service Connect:** Wakes up the integrated GLP iQ.Mesh Module for 5 minutes and enables connectivity to the GLP iQ.Service App.
- **Test All:** Runs a test sequence of all LEDs for a quick test of the fixture. Press BACK to stop the test sequence.
- **Test Tilt:** Runs a test sequence of tilt movement only. Press BACK to stop the test sequence.
- **Test LED:** Runs a test sequence of the LED pixel only. Press BACK to stop the test sequence.
- **Test Zoom:** Runs a test sequence of Zoom functionality only. Press BACK to stop the test sequence.
- **Test Fans (Auto):** Starts a fan self-test. Tries to detect fan errors, clears any current errors if successful.
- **Test Fans (Manual):** Tests fans one by one manually.
- **Test Encoders:** Auto test for all encoders.

Advanced Service

The **Advanced Service** level is for trained technicians only. Read the information below carefully before entering this level. You must confirm by pressing and holding ENTER for 3 seconds before you can enter this level.

The **Advanced Service** level contains the following items:

- **Service Mode:** Disables tilt and all display timeouts to make servicing the fixture head easier. This mode is automatically disabled after a power cycle.

- **Job Offset:** Lets you set +/- offsets on mechanical effects. Custom job offsets let you adjust fixtures in multiple installations (to compensate for the different positions of fixtures in a rig, for example).

Any custom job offsets that you create here will not affect the fixture's effect calibration.

All custom job offsets created here are deleted if you apply a **Load Factory Defaults** command.

- **Reset Counters:** Resets the different resettable fixture counters.
Device counters are not reset by a **Load Factory Backup** command.
- **Save Settings:** Lets you save the current fixture settings to one of the three user settings presets. You can load a user settings preset that you have saved with a **Load User Settings** command (see **Fixture Settings → Load User Settings**). The default fixture preset cannot be changed.

This command only saves fixture settings (Fan Mode, Color Mix etc.). It does not save fixture configuration information such as DMX address and DMX mode.

- **Firmware Push (Fixture2Fixture):** Pushes the fixture's firmware (flash storage) to all other fixtures of the same type via the DMX link.

Important! The impression X5 IP Bar 1000 series firmware is fully compatible with all impression X5 series fixtures. This means that a firmware push carried out by an impression X5 IP Bar 1000 will also push its firmware to other impression X5 fixtures such as impression X5, impression X5 Compact, impression X5 Bar 1000 etc.

Load Factory Defaults

Reloads all factory defaults over the entire fixture and brings the fixture into standard show condition.

You must confirm the function for 3 seconds before the default settings are loaded.

Important! The factory default settings that are reloaded with this command include all data and network configuration parameters such as DMX start address, IP configuration etc. You may therefore lose communication with your controller.

The **Load Factory Defaults** command does not affect device counters and calibration.

Factory Menu

Important! Do not enter the Factory Menu if you are not a trained service professional with service documentation or clear instructions from GLP Service. Read the user and service documentation carefully before entering this menu. In the Factory Menu you can apply critical settings which can damage the fixture.

The Factory Menu is a hidden menu for the manufacturer or professional service technicians only. This special menu allows fixture calibration and the adjustment of all mechanical features following the manufacturer's instructions.

To enable the Factory Menu, apply power to the fixture and press the ENTER and BACK buttons together while the pre-boot screen is being displayed. You can release the buttons as soon as FACTORY MODE appears in the black display. After doing this,

Factory Menu is visible as the last item in the main menu. The Factory Menu will remain available until the next power cycle. While the Factory Menu is enabled, all display timeouts are disabled to make working on the fixture easier and a Factory symbol is visible in the main screen.

5. Control panel



Warning! DMX control is disabled when the control menus are active. Be prepared for the head to move as soon as you exit the control menus.

The control panel and backlit graphic LCD display with self-charging battery allow you to change fixture settings, view readouts and use utilities quickly and intuitively, even when the fixture is disconnected from power.

To allow comfortable use of the control panel, tilt is automatically disabled for a few seconds if you press any button on the control panel. Tilt remains disabled for as long you are working in the control panel. If no button is pressed for a few seconds, head movement is re-enabled with tilt correction applied.

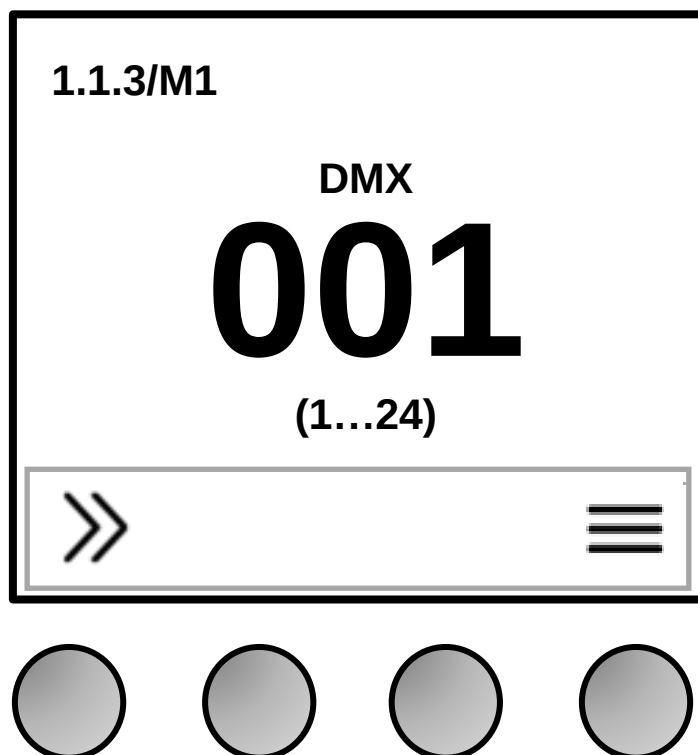


Figure 3. Default information screen

Default information screen

When power is applied, the fixture performs a reset. After the reset has completed, the default information screen appears in the control panel display on the side of the yoke.

At any other time, you can press any key to unlock the control panel. Doing this also calls up the default information screen in the control panel display.

See Figure 3. The top line of the default information screen consists of, from left to right:

- Main CPU firmware version
- DMX Mode

The center of the screen shows the following information:

- Signal source.
- Fixture's current DMX address in large characters. If the fixture's self-diagnosis system detects an error, the fixture will flash an error message alternately with the DMX address. This lets you see the DMX address and error message at a distance from the fixture.
- If the fixture detects a valid, active network at one of the fixture's etherCON ports, the default screen will show a network icon to the left or right of the DMX address:
 - Icon on left = data at Port A (on left of fixture when facing control panel)
 - Icon on right = data at Port B (on right of fixture when facing control panel)

The fixture displays network speed below the network icon.

If the fixture does not detect a network at one of the ports, it displays NO LINK instead of the network icon for that port.

- Below the current DMX address, the fixture displays in smaller characters the DMX channels that the fixture is currently using.

In the example shown in Figure 3:

- The fixture is running CPU software version 1.1.3
- The fixture is set to DMX Mode 1
- The fixture is set to receive data via DMX
- The fixture's DMX start address is 001
- The fixture is using DMX channels 1 to 24.

Using the control panel

The four control panel buttons under the display have the following functions.

In the main screen:



QUICK MENU – Activates the Quick Menu



UP/DOWN – Press three times to open the live diagnostic tool



MENU – Activates the control panel if it is in sleep mode, then opens the main menu

When navigating through the menus:



BACK – Goes back one level towards the top of the menu



UP – Scrolls up or increments a number




DOWN – Scrolls down or decreases a number



ENTER – Confirms a setting or implements a command

At any time:



UP and DOWN at the same time – Temporarily rotates the display 180°

Control button shortcuts

Battery Eco Mode (available in Battery Mode only)

When the fixture is running on battery power, holding MENU and ENTER together for 10 seconds activates Battery Eco Mode. This switches off the display completely to avoid any unwanted discharge of the battery and can be very useful when a fixture is put into long-term storage.

Live Diagnostics

Pressing UP or DOWN three times calls up an overview of all main fixture information, signal quality and settings. This can be useful if you are troubleshooting or if you are in contact with GLP Service.

Toggle Display Orientation

Pressing and releasing UP and DOWN together rotates the display through 180°.

*Note: If Display Orientation is set to **Auto**, changing the display orientation by pressing UP and DOWN at the same time will only change the display orientation until the next power cycle. To change the display orientation permanently, go to **Fixture Settings** → **Display Orientation** in the control panel menus.*

Error Messages

If the fixture detects an error, it displays an error message in the display. The Error is 'sticky' and will continue to be shown in the display until the next power cycle or reset. To get details of the error message, follow the information in the display. These details are important if you talk to GLP service.

Loss of DMX signal

The display flashes if the DMX signal is lost (the fixture will then behave according to its No Signal setting – see 'No signal' on page 21).

Service and maintenance

See the separate *impression X5 IP Bar 1000 Quick Start and Safety Manual* supplied with the fixture and available for download from www.glp.de for information on service and maintenance.

6. Setting up the control protocol

The impression X5 IP Bar 1000 can be controlled via:

- USITT512 DMX over a standard DMX cable link using the fixture's 5-pin XLR connectors,
- GLP's wireless iQ.Mesh technology.
- LumenRadio CRMX (supplied). The integrated GLP FPO (Flexible Protocol Option) port allows the installation of an optional control protocol module. The impression X5 IP Bar 1000 is supplied with a LumenRadio CRMX module installed as standard. Your GLP supplier can give you details of other control protocol modules that may be available.

This section explains how to configure the fixture to use one of these control data protocols.

*Note: The control protocol settings are not affected if you apply a **Fixture Settings** → **Load User Settings** → **Setting Defaults** command in the fixture's control panel, but they are returned to factory defaults if you apply a **Load Factory Defaults** command in the main menu.*

DMX

The fixture is set up for control via a standard DMX cable link by default.

If the control data protocol has been changed and you want to return to DMX control over a standard DMX cable link, open the menus in the fixture's control panel and make the following adjustments:

1. In the main menu in the fixture's control panel, open **DMX Address** and give the fixture a suitable DMX address.
2. In the **Protocol Setup** → **Data In** menu, set the control protocol to **DMX**.

iQ.Mesh

If you want to control the fixture via GLP iQ.Mesh:

1. Open the menus in the fixture's control panel.
2. In the **Protocol Setup** → **Data In** menu, set the control protocol to **iQ.Mesh**.

LumenRadio CRMX

A LumenRadio CRMX module is installed as standard at the impression X5 IP Bar 1000's FPO port when the fixture is supplied.

If you want to control the fixture via LumenRadio CRMX, open the menus in the fixture's control panel and make the following adjustments:

1. Open the menus in the fixture's control panel.
2. In the **Protocol Setup** → **Data In** menu, set the control protocol to **CRMX**.

7. Control menus

Quick menu

The control panel's Quick Menu gives you quick access to the most frequently used commands. To open the Quick Menu, press the left-hand control button marked  when the display is showing the default information screen.

The Quick Menu contains the following items:

Menus		Notes
Reset All		Resets the entire fixture (takes a few seconds).
Live Diagnostic		Calls up overview of all main fixture information, signal quality and settings.
iQ.Service Connect	>>>Connect<<<	Enables connectivity to the GLP iQ.Service App for 5 minutes.
Load User Settings	User Setting Preset 1	>>>Confirm<<< Loads custom user settings
	User Setting Preset 2	
	User Setting Preset 3	
	Setting Defaults	>>>Confirm<<< Returns fixture to default settings (not including DMX address, protocol type, Ethernet / CRMX configuration, user offsets, user presets and counters).
Load Factory Defaults (!)	Displays Message: Fixture may lose connection to controller >>>Confirm<<<	Restores all factory default settings (including DMX address, protocol type, Ethernet / CRMX configuration, user offsets and user presets). Important! The fixture may lose contact with the controller!

Main menu

The following menus and commands are available in the impression X5 IP Bar 1000 control panel.

Menus		Notes
DMX Address		
001-512		Set fixture's DMX start address. Highest possible address depends on control mode.
Control Mode		
M1 Basic		Set fixture's DMX control mode.
M2 Normal		
M3 Segment		
M4 Multipix Advanced		
M5 Multipix Compressed RGB		
M6 Multipix Compressed RGBL		
Protocol Setup		
Data In	DMX	Control via DMX protocol
	iQ.Mesh	Control via GLP iQ.Mesh
	CRMX	Control via CRMX (only available if CRMX module is installed at fixture's FPO port)
Linking options	iQ.Mesh Unlink	Unlink from GLP iQ.Mesh link
	CRMX (FPO) Unlink	Unlink from CRMX (only available if CRMX module is installed at fixture's FPO port)
Fixture Settings		
Color Mix Mode	RGB	Direct RGB control, Lime added automatically
	RGBL	Direct RGBL control
	x;y	x:y color co-ordinate control
White Point	8000 K	Set fixture white point when RGB is at 100% (RGB Color Mix Mode only)
	6500 K	
	5600 K	
	4200 K	
	3200 K	
iQ.Gamut	FULL	Maximum color gamut
	Rec.2020	Color space defined to Rec.2020 Gamut (RGB Color Mix Mode only)
	Rec.709	Color space defined to Rec.709 Gamut (RGB Color Mix Mode only)
	DCI P3.65	Color space defined to DCI P3.65 Gamut (RGB Color Mix Mode only)

Dimmer Curve	Linear		Linear dimming curve
	Soft		Soft (square law) dimming curve
	S-Curve		Finer dimming control at low and high intensity
Fan Mode	Regulated		Fan speed temperature-regulated
	High		Fan speed constant high
	Medium		Fan speed constant medium
	Low		Fan speed constant low
	Minimum		All fans off or at minimum speed
Subfixture Mode	Normal		Main module's dimmer and shutter channels act as global dimmer/shutter and affect Sub module output
	Independent		Sub module is independent of Main module
Performance	Fast		Mechanical effects speed optimized for speed
	Normal		Mechanical effects speed balanced for speed and smoothness
	Smooth		Mechanical effects speed limited for optimized smoothness and low noise
PWM Frequency	Low (L)		Optimum fixed frequency for best dimming results at approx. 3000Hz
	Optimal (0)		Optimum dynamic frequency for best performance
	High 1 (H1)		Fixed frequency at approx. 4800 Hz
	High 2 (H2)		Fixed frequency at approx. 9600 Hz
	Max (M)		Highest possible fixed Frequency at approx. 25 kHz
Pixel Mirror	Off		Normal pixel layout
	Mirror Y		Pixels mirrored over y-axis
No Signal	No Signal Mode	Blackout	Fixture blacks out if no DMX signal received
		Hold	Fixture continues to display current effect if no DMX signal received
		Scene	Plays the stored captured scene (see next menu item) if no DMX signal received
	Capture DMX Values	>>>Confirm<<<	Captures current scene and stores it for use in No Signal Mode → Scene
Tilt Invert	OFF		Reverse direction of tilt movement
	ON		

Position feedback	OFF	Enable/disable /tilt position correction	
	ON		
Tilt Disable	OFF	Disables tilt motor	
	Current Disable		
Display Mode	Auto	Display dims after a short period of inactivity if no errors and valid DMX signal	
	On	Display constantly on	
	Off	Display dims even if there are errors / no DMX signal	
Display Orientation	Auto	Display automatically inverts to match installation position	
	Normal	Display normal (for use when fixture is standing)	
	Flip	Display inverted (for use when fixture is flown head-down)	
Hibernation	ON	Fixture enters energy saving mode, all electronics except DMX receiver are disabled. Cycling power off and on exits hibernation.	
Load User Settings	User Setting Preset 1	>>> Confirm<<<	Apply a user preset to fixture settings
	User Setting Preset 2	>>> Confirm<<<	
	User Setting Preset 3	>>> Confirm<<<	
		Setting Defaults	>>> Confirm<<<
Information			
Live diagnostic		Shows overview of fixture information	
Show errors		Shows any stored errors	
Show temperature		Shows fixture temperature	
Show fan status		Shows current cooling fan status	
Show controllers info		Shows controllers info	
Show iQ.Mesh status		Shows current GLP iQ.Mesh status	
Show LED calibration		Shows LED calibration information	
Show fixture counters		Shows total device hours (non-resettable), resettable device hours, total power cycles (non-resettable), resettable power cycles, resettable air filter hours	
Show DMX input		Shows DMX values being received	
Show DMX info		Shows info about any lost DMX packages	

Manual Control				
Reset All			Reset all effects	
Reset Tilt			Reset tilt only	
Reset Head			Reset all effects except tilt	
Manual DMX	Tilt	001 - 128 - 255		Manually control all effects
	Intensity	000 - 255		
	... Scroll through all effects ...			
	Blue - All Pixel	000 - 255		
	Lime - All Pixel	000 - 255		
Press Enter	Reset Manual Values	Confirm for 3 seconds (press Enter)		Reset all manually entered DMX values to zero
Service				
Live diagnostic				Shows overview of fixture information
iQ.Service Connect		>>> Connect <<<		Enables connectivity to the GLP iQ.Service app.
Tests	Test All			Run test sequence of all effects including tilt. Stop with BACK.
	Test Tilt			Run test sequence of tilt only. Stop with BACK.
	Test LED			Run test sequence of all LEDs. Stop with BACK.
	Test Zoom			Run test sequence of zoom effect. Stop with BACK.
	Test Fans (Auto)			Run fan self-test. Tries to detect fan errors, clears if successful.
	Test Fans (Manual)			Manually test fans one by one
	Test Encoders			Auto test for all encoders

Advanced (Press and hold for 3 secs.)	Service Mode	OFF		Normal operation
		ON		Disable tilt and display timeouts (exit by cycling power off and on.)
	Job offsets	Tilt Zoom		Create custom job offsets in home positions of all effects. Default offset = 0 Note: This function is not fixture calibration!
	Reset counters	Lamp Hours	Confirm 2 seconds	Reset to zero
		Service Timer	Confirm 2 seconds	
		Air filter	Confirm 2 seconds	
	Save User Settings	User Setting Preset 1	Confirm 2 seconds	Saves current fixture settings as user settings preset
		User Setting Preset 2	Confirm 2 seconds	
		User Setting Preset 3	Confirm 2 seconds	
	Firmware push (Fixture2fixture)	>>> Confirm <<<		Push fixture's firmware to all other fixtures of the same type over the DMX link
Load factory defaults				
>>>Confirm<<<				Reloads all factory default settings and default fixture configuration settings. Important! Controller may lose connection to fixture!

Default settings are written in **BOLD type**

8. Error messages

When restarting the fixture or sending a RESET command, the fixture performs an initialization process to test all functions and sensors. The fixture also continuously checks itself for correct operation.


If an error is detected, the fixture display shows the message **ERROR**.

- Pressing **X** ignores the error message and exits the error display.
- Pressing **✓** shows information about the error.

Note: Make a note of any error message displayed. You may need these details for error diagnosis. Please be ready to give them to GLP Service if necessary.

Certain critical error messages are permanently stored in the display. In this case, please contact your GLP service agent.

9. Pixel layout

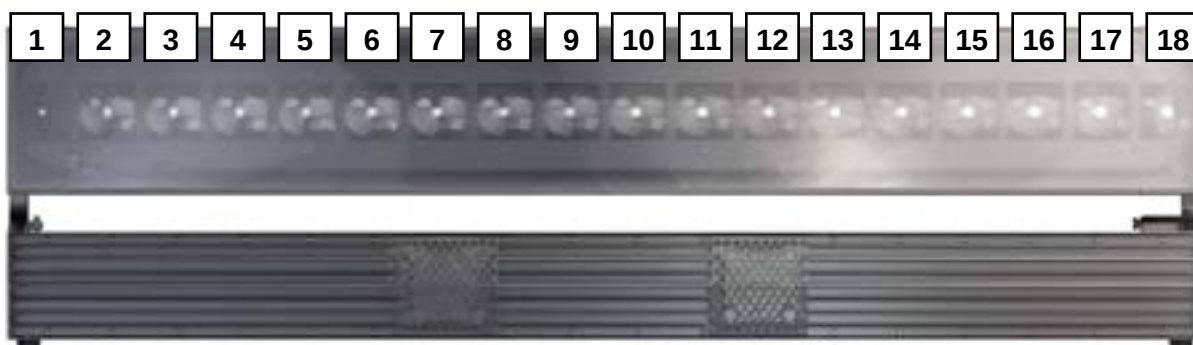

The impression X5 IP Bar 1000 pixels are located as shown above, seen from the front of the fixture with tilt at >50% and **Pixel mirror** → **y-mirror** set to **Off**.

You can mirror the pixels over the y axis (inverting the order of the pixels so that they run from pixel 18 on the left to pixel 1 on the right in the illustration above) if you set **Pixel mirror** to **y-mirror** in the **Fixture Settings** options available in the fixture's control panel, on the Control/Settings DMX channel or via RDM.

10. DMX control modes overview

The following DMX control modes are available in the impression X5 IP Bar 1000.

DMX channels from 1 to 7 have the same functionality in all the DMX control modes.

DMX Mode 1: Basic

20 DMX Channels

Basic DMX Mode gives control of the fixture's main functions. Tilt, dimming and the color mixing channels are available with 16-bit control resolution. A shutter channel gives direct change between open and blackout plus a range of intensity effects. Zoom is also available with 8-bit resolution. The Control/Settings channel lets you adjust fixture settings via DMX.

The color control channels offer color mixing using either [1] RGB, [2] RGBL or [3] x;y color gamut coordinates, depending on which of these three methods is active. You can select the color mixing method via DMX on the Control/Settings channel, via RDM or using the fixture's control panel. Additional color options channels include a color wheel with a wide range of color presets, a CTC channel, magenta/green shift adjustment and a tungsten simulation channel. The CQC channel lets you select if the fixture should give priority to color rendering or output intensity in its white output. This channel also offers an easy way of desaturating colors.

Mode 1 Basic			
Main module	1.1	Tilt	1
			2
		Intensity	3
			4
		Shutter	5
		Zoom	6
		Control / Settings	7
		[1] RGB – Red	8
		[2] RGBL – Red	9
		[3] x;y – x	
		[1] RGB – Green	10
		[2] RGBL – Green	11
		[3] x;y – y	
		[1] RGB – Blue	12
		[2] RGBL – Blue	13
		[3] x;y – not used	
		[1] RGB – not used	14
		[2] RGBL – Lime	15
		[3] x;y – not used	
		Color wheel	16
		CTC (Color temperature control)	17
		CQC (Color quality control)	18
		M/G shift	19
		Tungsten simulation	20

DMX Mode 2: Normal (default)

33 DMX channels

Normal DMX Mode is split into a **Main Module** and a **Sub Module**.

The **Main Module** gives control of the main functions, as in **Basic** DMX Mode. Tilt, dimming and the color mixing channels have 16-bit control resolution. A shutter channel gives direct change between open and blackout plus a range of intensity effects. Zoom is also available with 8-bit resolution. The Control/Settings channel lets you adjust fixture settings via DMX.

The color control channels in the Main Module offer color mixing using either [1] RGB, [2] RGBL or [3] x;y color gamut coordinates, depending on which of these three methods is active. You can select the color mixing method via DMX on the Control/Settings channel, via RDM or using the fixture's control panel. Additional color options channels include a color wheel with a wide range of color presets, a CTC channel, magenta/green shift adjustment and a tungsten simulation channel. The CQC channel lets you select if the fixture should give priority to color rendering or output intensity in its white output. This channel also offers an easy way of desaturating colors.

The Mix Priority channel defines how the output of the Main and Sub Module is merged or overlayed.

The **Sub Module** forms a second layer. The Sub Module channels provide intensity and shutter control, a powerful static and dynamic pattern effects engine with step crossfading and pattern transition options, plus RGB color control of all 18 pixels as one group.

Mode 2 Normal

Main module	1.1	Tilt	1
			2
		Intensity	3
			4
		Shutter	5
		Zoom	6
		Control / Settings	7
		[1] RGB – Red	8
		[2] RGBL – Red	9
		[3] x;y – x	
		[1] RGB – Green	10
		[2] RGBL – Green	11
		[3] x;y – y	
		[1] RGB – Blue	12
		[2] RGBL – Blue	13
		[3] x;y – not used	
		[1] RGB – not used	14
		[2] RGBL – Lime	15
		[3] x;y – not used	
		Color wheel	16
		CTC (Color temperature control)	17
		CQC (Color quality control)	18
		M/G shift	19
		Tungsten simulation	20
		Mix priority	21

Sub module (Layer 2)	1.2	Intensity	22
			23
		Shutter	24
		Pattern selection	25
		Pattern step / speed	26
		Pattern step crossfading	27
		Pattern transition	28
		Fixture quantity	29
		Fixture number	30
		Red	31
		Green	32
		Blue	33

DMX Mode 3: Segments

48 DMX channels

Segment DMX Mode is split into a Main Module and a Sub Module.

The **Main Module** gives control of the main functions, as in **Basic** DMX Mode. Tilt, dimming and the color mixing channels have 16-bit control resolution. A shutter channel gives direct change between open and blackout plus a range of intensity effects. Zoom is also available with 8-bit resolution. The Control/Settings channel lets you adjust fixture settings via DMX.

The color control channels in the Main Module offer color mixing using either [1] RGB, [2] RGBL or [3] x;y color gamut coordinates, depending on which of these three methods is active. You can select the color mixing method via DMX on the Control/Settings channel, via RDM or using the fixture's control panel. Additional color options channels include a color wheel with a wide range of color presets, a CTC channel, magenta/green shift adjustment and a tungsten simulation channel. The CQC channel lets you select if the fixture should give priority to color rendering or output intensity in its white output. This channel also offers an easy way of desaturating colors.

The Mix Priority channel defines how the output of the Main and Sub Module is merged or overlayed.

The **Sub Module** forms a second layer. The Sub Module channels provide intensity and shutter control, a powerful static and dynamic pattern effects engine with step crossfading and pattern transition options, plus RGB color control of six pixel groups as segments.

Mode 3 Segment			
Main module	1.1	Tilt	1
			2
		Intensity	3
			4
		Shutter	5
		Zoom	6
		Control / Settings	7
		[1] RGB – Red	8
		[2] RGBL – Red	
		[3] x;y – x	9
		[1] RGB – Green	10
		[2] RGBL – Green	
		[3] x;y – y	11
		[1] RGB – Blue	12
		[2] RGBL – Blue	
		[3] x;y – not used	13
		[1] RGB – not used	14
		[2] RGBL – Lime	
		[3] x;y – not used	15
		Color wheel	16
		CTC (Color temperature control)	17
		CQC (Color quality control)	18
		M/G shift	19
		Tungsten simulation	20
		Mix priority	21

Sub module (Layer 2)	1.2	Intensity	22
			23
		Shutter	24
		Pattern selection	25
		Pattern step / speed	26
		Pattern step crossfading	27
		Pattern transition	28
		Fixture quantity	29
		Fixture number	30
	1.3	Red, segment 1 (pixels 01-03)	31
		Green, segment 1 (pixels 01-03)	32
		Blue, segment 1 (pixels 01-03)	33
	1.4	Red, segment 2 (pixels 04-06)	34
		Green, segment 2 (pixels 04-06)	35
		Blue, segment 2 (pixels 04-06)	36
	1.5	Red, segment 3 (pixels 07-09)	37
		Green, segment 3 (pixels 07-09)	38
		Blue, segment 3 (pixels 07-09)	39
	1.6	Red, segment 4 (pixels 10-12)	40
		Green, segment 4 (pixels 10-12)	41
		Blue, segment 4 (pixels 10-12)	42
	1.7	Red, segment 5 (pixels 13-15)	43
		Green, segment 5 (pixels 13-15)	44
		Blue, segment 5 (pixels 13-15)	45
	1.8	Red, segment 6 (pixels 16-18)	46
		Green, segment 6 (pixels 16-18)	47
		Blue, segment 6 (pixels 16-18)	48

DMX Mode 4: Multipix Advanced

84 DMX Channels

Multipix Advanced DMX Mode is split into a Main Module and a Sub Module.

The **Main Module** gives control of the main functions, as in **Basic** DMX Mode. Tilt, dimming and the color mixing channels have 16-bit control resolution. A shutter channel gives direct change between open and blackout plus a range of intensity effects. Zoom is also available with 8-bit resolution. The Control/Settings channel lets you adjust fixture settings via DMX.

The color control channels in the Main Module offer color mixing using either [1] RGB, [2] RGBL or [3] x;y color gamut coordinates, depending on which of these three methods is active. You can select the color mixing method via DMX on the Control/Settings channel, via RDM or using the fixture's control panel. Additional color options channels include a color wheel with a wide range of color presets, a CTC channel, magenta/green shift adjustment and a tungsten simulation channel. The CQC channel lets you select if the fixture should give priority to color rendering or output intensity in its white output. This channel also offers an easy way of desaturating colors.

The Mix Priority channel defines how the output of the Main and Sub Module is merged or overlayed.

The **Sub Module** forms a second layer. The Sub Module channels provide intensity and shutter control, a powerful static and dynamic pattern effects engine with step crossfading and pattern transition options, plus RGB color control of each individual pixel.

Mode 4 Multipix Advanced

Main module	1.1	Tilt	1
			2
		Intensity	3
			4
		Shutter	5
		Zoom	6
		Control / Settings	7
		[1] RGB – Red	8
		[2] RGBL – Red	9
		[3] x;y – x	
		[1] RGB – Green	10
		[2] RGBL – Green	11
		[3] x;y – y	
		[1] RGB – Blue	12
		[2] RGBL – Blue	13
		[3] x;y – not used	
		[1] RGB – not used	14
		[2] RGBL – Lime	15
		[3] x;y – not used	
		Color wheel	16
		CTC (Color temperature control)	17
		CQC (Color quality control)	18
		M/G shift	19
		Tungsten simulation	20
		Mix priority	21

Sub module (Layer 2)	1.2	Intensity	22
			23
		Shutter	24
		Pattern selection	25
		Pattern step / speed	26
		Pattern step crossfading	27
		Pattern transition	28
		Fixture quantity	29
		Fixture number	30
	1.3	Red, pixel 01	31
		Green, pixel 01	32
		Blue, pixel 01	33
	1.4 ... 1.19	RGB, pixels 02-17	34
			...
			81
	1.20	Red, pixel 18	82
		Green, pixel 18	83
		Blue, pixel 18	84

DMX Mode 5: Multipix Compressed RGB

63 DMX Channels

MultiPix Compressed RGB DMX Mode gives control of the main functions, as in **Basic** DMX Mode, plus RGB color control of each individual pixel. Tilt and dimming have 16-bit control resolution. A shutter channel gives direct change between open and blackout plus a range of intensity effects. Zoom is also available with 8-bit resolution. The Control/Settings channel lets you adjust fixture settings via DMX.

The CTC Channel lets you temporarily change from the fixed white point to any other color temperature. The CQC channel lets you select if the fixture should give priority to color rendering or output intensity in its white output. This channel also offers an easy way of desaturating colors.

RGB color mixing is carried out on the individual pixel control channels.

Mode 5 Multipix Compressed RGB

Main module	1.1	Tilt	1
			2
		Intensity	3
			4
		Shutter	5
		Zoom	6
		Control / Settings	7
		CTC (Color temperature control)	8
		CQC (Color quality control)	9

Sub module (Layer 2)	1.2	Red, pixel 01	10
		Green, pixel 01	11
		Blue, pixel 01	12
	1.3 ... 1.18	RGB, pixels 02-17	13
			...
			60
	1.19	Red, pixel 18	61
		Green, pixel 18	62
		Blue, pixel 18	63

DMX Mode 6: Multipix Compressed RGBL

81 DMX Channels

MultiPix Compressed RGBL DMX Mode gives control of the main functions, as in **Basic** DMX Mode, plus RGBL color control of each individual pixel with Lime added automatically.

Tilt and dimming have 16-bit control resolution. A shutter channel gives direct change between open and blackout plus a range of intensity effects. Zoom is also available with 8-bit resolution. The Control/Settings channel lets you adjust fixture settings via DMX.

The CTC Channel lets you temporarily change from the fixed white point to any other color temperature. The CQC channel lets you select if the fixture should give priority to color rendering or output intensity in its white output. This channel also offers an easy way of desaturating colors.

RGBL color mixing is carried out on the individual pixel control channels.

Mode 6 Multipix Compressed RGBL

Main module	1.1	Tilt	1
			2
		Intensity	3
			4
		Shutter	5
		Zoom	6
		Control / Settings	7
		CTC (Color temperature control)	8
		CQC (Color quality control)	9

Sub module (Layer 2)	1.2	Red, pixel 01	10
		Green, pixel 01	11
		Blue, pixel 01	12
		Lime, pixel 01	13
	1.3 ... 1.18	RGBL, pixels 02-17	14
			...
			77
	1.19	Red, pixel 18	78
		Green, pixel 18	79
		Blue, pixel 18	80
		Lime, pixel 18	81

11. DMX control channel layout

In the following DMX channel layout tables:

- Default settings are indicated with **bold type**.
- Where commands are marked **(3 sec.)**, you must send that DMX value continuously for 3 seconds (or other duration if indicated in the table) to apply the command.
- Percentage equivalents are rounded up or down to the nearest 0.1%

DMX Mode 1: Basic

20 DMX Channels

Basic control

Channel		Command	DMX range		Percent		Default DMX	Fade
1	Tilt coarse	Tilt back → front	0	65535	0	100	32768	Fade
2	Tilt fine							
3	Intensity coarse	Intensity 0 → 100%	0	65535	0	100	32768	Fade
4	Intensity fine							
5	Shutter	Closed	0	4	0	1.6	255	Snap
		Single flash each time value is changed within range 005 → 009	5	9	2.0	3.5		Snap
		Pulse slow → fast	10	39	3.9	15.3		Fade
		Opening pulse slow → fast	40	69	15.7	27.1		Fade
		Closing pulse slow → fast	70	99	27.5	38.8		Fade
		Double flash slow → fast	100	129	39.2	50.6		Fade
		Random pixel strobe slow → fast	130	159	51.0	62.4		Fade
		Random all strobe slow → fast	160	199	62.7	78.0		Fade
		Strobe sync all pixels slow → fast	200	250	78.4	98.0		Fade
		Open	251	255	98.4	100		Snap
6	Zoom	Zoom narrow → wide	0	255	0	100	0	Fade
7	Control/Settings	See 'Control / Settings channel' on page 79						
8	RGB / RGBL / x,y color control (see also 'Key to conversion of x and y coordinates' on page 81)	[1] RGB - Red coarse [2] RGBL - Red coarse [3] x;y - x coarse	0	65535	0	100	65535	Fade
9		[1] RGB - Red fine [2] RGBL - Red fine [3] x;y - x fine						
10		[1] RGB - Green coarse [2] RGBL - Green coarse [3] x;y - y coarse	0	65535	0	100	65535	Fade
11		[1] RGB - Green fine [2] RGBL - Green fine [3] x;y - y fine						
12		[1] RGB - Blue coarse [2] RGBL - Blue coarse [3] x;y - <i>not used</i>	0	65535	0	100	65535	Fade
13		[1] RGB - Blue fine [2] RGBL - Blue fine [3] x;y - <i>not used</i>						
14		[1] RGB - <i>not used</i> [2] RGBL - Lime coarse [3] x;y - <i>not used</i>	0	65535	0	100	65535	Fade
15		[1] RGB - <i>not used</i> [2] RGBL - Lime fine [3] x;y - <i>not used</i>						

Basic control (continued)

16	Color wheel (see also 'Color wheel specifications' on page 82)	Open	0	9	0	3.5	0	Snap
		Filter 004 (Medium Bastard Amber)	10	12	3.9	4.7		
		Filter 019 (Fire)	13	15	5.1	5.9		
		Filter 025 (Sunset Red)	16	18	6.3	7.1		
		Filter 026 (Bright Red)	19	21	7.5	8.2		
		Filter 036 (Medium Pink)	22	24	8.6	9.4		
		Filter 049 (Medium Purple)	25	27	9.8	10.6		
		Filter 058 (Lavender)	28	30	11.0	11.8		
		Filter 068 (Sky Blue)	31	33	12.2	12.9		
		Filter 088 (Lime Green)	34	36	13.3	14.1		
		Filter 089 (Moss Green)	37	39	14.5	15.3		
		Filter 090 (Dark Yellow Green)	40	42	15.7	16.5		
		Filter 102 (Light Amber)	43	45	16.9	17.6		
		Filter 103 (Straw)	46	48	18.0	18.8		
		Filter 106 (Primary Red)	49	51	19.2	20.0		
		Filter 111 (Dark Pink)	52	54	20.4	21.2		
		Filter 115 (Peacock Blue)	55	57	21.6	22.4		
		Filter 117 (Steel Blue)	58	60	22.7	23.5		
		Filter 118 (Light Blue)	61	63	23.9	24.7		
		Filter 121 (Filter Green)	64	66	25.1	25.9		
		Filter 122 (Fern Green)	67	69	26.3	27.1		
		Filter 124 (Dark Green)	70	72	27.5	28.2		
		Filter 126 (Mauve)	73	75	28.6	29.4		
		Filter 128 (Bright Pink)	76	78	29.8	30.6		
		Filter 131 (Marine Blue)	79	81	31.0	31.8		
		Filter 132 (Medium Blue)	82	84	32.2	32.9		
		Filter 134 (Golden Amber)	85	87	33.3	34.1		
		Filter 135 (Deep Golden Amber)	88	90	34.5	35.3		
		Filter 136 (Pale Lavender)	91	93	35.7	36.5		
		Filter 137 (Special Lavender)	94	96	36.9	37.6		
		Filter 138 (Pale Green)	97	99	38.0	38.8		
		Filter 140 (Summer Blue)	100	102	39.2	40.0		
		Filter 141 (Bright Blue)	103	105	40.4	41.2		
		Filter 143 (Pale Navy Blue)	106	108	41.6	42.4		
		Filter 147 (Apricot)	109	111	42.7	43.5		
		Filter 148 (Bright Rose)	112	114	43.9	44.7		
		Filter 152 (Pale Gold)	115	117	45.1	45.9		
		Filter 154 (Pale Rose)	118	120	46.3	47.1		
		Filter 157 (Pink)	121	123	47.5	48.2		
		Filter 162 (Bastard Amber)	124	126	48.6	49.4		
		Filter 164 (Flame Red)	127	129	49.8	50.6		
		Filter 165 (Daylight Blue)	130	132	51.0	51.8		
		Filter 169 (Lilac Tint)	133	135	52.2	52.9		
		Filter 170 (Deep Lavender)	136	138	53.3	54.1		
		Filter 172 (Lagoon Blue)	139	141	54.5	55.3		
		Filter 180 (Dark Lavender)	142	144	55.7	56.5		
		Filter 182 (Light Red)	145	147	56.9	57.6		
		Filter 194 (Surprise Pink)	148	150	58.0	58.8		
		Filter 197 (Alice Blue)	151	153	59.2	60.0		
		Filter 201 (Full C.T. Blue)	154	156	60.4	61.2		
		Filter 202 (Half C.T. Blue)	157	159	61.6	62.4		
		Filter 203 (Quarter C.T. Blue)	160	162	62.7	63.5		
		Filter 204 (Full C.T. Orange)	163	165	63.9	64.7		
		Filter 206 (Quarter C.T. Orange)	166	168	65.1	65.9		
		Filter 219 (Fluorescent Green)	169	171	66.3	67.1		
		Filter 247 (Filter Minus Green)	172	174	67.5	68.2		

Basic control (continued)

16 ctd.	Color wheel (continued)	Filter 248 (Half Minus Green)	175	177	68.6	69.4	0	Snap
		Filter 281 (Three Quarter C.T. Blue)	178	180	69.8	70.6		
		Filter 285 (Three Qtr. C.T. Orange)	181	183	71.0	71.8		
		Filter 352 (Glacier Blue)	184	186	72.2	72.9		
		Filter 353 (Lighter Blue)	187	189	73.3	74.1		
		Filter 507 (Madge)	190	192	74.5	75.3		
		Filter 778 (Millennium Gold)	193	195	75.7	76.5		
		Filter 793 (Vanity Fair)	196	198	76.9	77.6		
		Filter 798 (Chrysalis Pink)	199	201	78.0	78.8		
		HSI scroll, stop at first color	202	204	79.2	80.0		
		HSI scroll slow → fast	205	252	80.4	98.8		Fade
		HSI scroll, stop at current color	253	255	99.2	100		Snap
17	Color Temperature Control	Open	0	9	0	3.5	0	Snap
		Fade through color temperatures of 10 000 K to 2 500 K stepless (interpolation)	10	255	4.3	100		Fade
18	CQC (Color Quality Control) / Saturation	HQ (high quality), saturated color	0	9	0	3.5	0	Snap
		Crossfade, saturated to unsaturated	10	117	3.9	45.9		Fade
		HQ (high quality), unsaturated color	118	127	46.3	49.8		Snap
		HO (high output), unsaturated color	128	137	50.2	53.7		
		Crossfade, unsaturated to saturated	138	245	54.1	96.1		Fade
		HO (high output), saturated color	246	255	96.5	100		Snap
19	M/G shift	Off (no correction)	0	9	0	3.5	0	Snap
		Full plus magenta +100%	10	10	3.9	3.9		Fade
		Plus magenta +99% → +1%	11	124	4.3	48.6		
		Neutral / no correction	125	140	49.0	54.9		Snap
		Plus green +1% → +99%	141	254	55.3	99.6		Fade
		Full plus green +100%	255	255	100	100		Snap
20	Tungsten effect	Off	0	9	0	3.5	0	Snap
		Tungsten ACL 250W/28V	10	19	3.9	7.5		
		Tungsten Blinder 650W/120V	20	29	7.8	11.4		
		Tungsten 750W/80V	30	39	11.8	15.3		
		Tungsten 1000W/240V	40	49	15.7	19.2		
		Tungsten 1200W/240V	50	59	19.6	23.1		
		Tungsten 2000W/230V	60	69	23.5	27.1		
		Tungsten 2500W/230V	70	79	27.5	31.0		
		Tungsten 5000W/230V	80	89	31.4	34.9		
		No function (off)	90	120	35.3	47.1		
		Off	120	139	47.1	54.5		
		FX Tungsten ACL 250W/28V	140	149	54.9	58.4		
		FX Tungsten Blinder 650W/120V	150	159	58.8	62.4		
		FX Tungsten 750W/80V	160	169	62.7	66.3		
		FX Tungsten 1000W/240V	170	179	66.7	70.2		
		FX Tungsten 1200W/240V	180	189	70.6	74.1		
		FX Tungsten 2000W/230V	190	199	74.5	78.0		
		FX Tungsten 2500W/230V	200	209	78.4	82.0		
		FX Tungsten 5000W/230V	210	219	82.4	85.9		
		No function (off)	220	255	86.3	100		

DMX Mode 2: Normal (default DMX mode)

33 DMX Channels

Channel	Command		DMX range		Percent		Default DMX	Fade
Main Module: basic control								
1	Tilt coarse	Tilt back → front	0	65535	0	100	32768	Fade
2	Tilt fine							
3	Intensity coarse	Intensity 0 → 100%	0	65535	0	100	32768	Fade
4	Intensity fine							
5	Shutter	Closed	0	4	0	1.6	255	Snap
		Single flash each time value is changed within range 005 → 009	5	9	2.0	3.5		Snap
		Pulse slow → fast	10	39	3.9	15.3		Fade
		Opening pulse slow → fast	40	69	15.7	27.1		Fade
		Closing pulse slow → fast	70	99	27.5	38.8		Fade
		Double flash slow → fast	100	129	39.2	50.6		Fade
		Random pixel strobe slow → fast	130	159	51.0	62.4		Fade
		Random all strobe slow → fast	160	199	62.7	78.0		Fade
		Strobe sync all pixels slow → fast	200	250	78.4	98.0		Fade
		Open	251	255	98.4	100		Snap
6	Zoom	Zoom narrow → wide	0	255	0	100	0	Fade
7	Control/Settings	See 'Control / Settings channel' on page 79						
8	RGB / RGBL / x,y color control (see also 'Key to conversion of x and y coordinates' on page 81)	[1] RGB - Red coarse [2] RGBL - Red coarse [3] x;y - x coarse	0	65535	0	100	65535	Fade
9		[1] RGB - Red fine [2] RGBL - Red fine [3] x;y - x fine						
10		[1] RGB - Green coarse [2] RGBL - Green coarse [3] x;y - y coarse	0	65535	0	100	65535	Fade
11		[1] RGB - Green fine [2] RGBL - Green fine [3] x;y - y fine						
12		[1] RGB - Blue coarse [2] RGBL - Blue coarse [3] x;y - not used	0	65535	0	100	65535	Fade
13		[1] RGB - Blue fine [2] RGBL - Blue fine [3] x;y - not used						
14		[1] RGB - not used [2] RGBL - Lime coarse [3] x;y - not used	0	65535	0	100	65535	Fade
15		[1] RGB - not used [2] RGBL - Lime fine [3] x;y - not used						
16	Color wheel (see also 'Color wheel specifications' on page 82)	Open	0	9	0	3.5	0	Snap
		Filter 004 (Medium Bastard Amber)	10	12	3.9	4.7		
		Filter 019 (Fire)	13	15	5.1	5.9		
		Filter 025 (Sunset Red)	16	18	6.3	7.1		
		Filter 026 (Bright Red)	19	21	7.5	8.2		
		Filter 036 (Medium Pink)	22	24	8.6	9.4		
		Filter 049 (Medium Purple)	25	27	9.8	10.6		
		Filter 058 (Lavender)	28	30	11.0	11.8		
		Filter 068 (Sky Blue)	31	33	12.2	12.9		
		Filter 088 (Lime Green)	34	36	13.3	14.1		

Main Module: basic control (continued)

16 ctd.	Color wheel (continued)	Filter 089 (Moss Green)	37	39	14.5	15.3	0	Snap
		Filter 090 (Dark Yellow Green)	40	42	15.7	16.5		
		Filter 102 (Light Amber)	43	45	16.9	17.6		
		Filter 103 (Straw)	46	48	18.0	18.8		
		Filter 106 (Primary Red)	49	51	19.2	20.0		
		Filter 111 (Dark Pink)	52	54	20.4	21.2		
		Filter 115 (Peacock Blue)	55	57	21.6	22.4		
		Filter 117 (Steel Blue)	58	60	22.7	23.5		
		Filter 118 (Light Blue)	61	63	23.9	24.7		
		Filter 121 (Filter Green)	64	66	25.1	25.9		
		Filter 122 (Fern Green)	67	69	26.3	27.1		
		Filter 124 (Dark Green)	70	72	27.5	28.2		
		Filter 126 (Mauve)	73	75	28.6	29.4		
		Filter 128 (Bright Pink)	76	78	29.8	30.6		
		Filter 131 (Marine Blue)	79	81	31.0	31.8		
		Filter 132 (Medium Blue)	82	84	32.2	32.9		
		Filter 134 (Golden Amber)	85	87	33.3	34.1		
		Filter 135 (Deep Golden Amber)	88	90	34.5	35.3		
		Filter 136 (Pale Lavender)	91	93	35.7	36.5		
		Filter 137 (Special Lavender)	94	96	36.9	37.6		
		Filter 138 (Pale Green)	97	99	38.0	38.8		
		Filter 140 (Summer Blue)	100	102	39.2	40.0		
		Filter 141 (Bright Blue)	103	105	40.4	41.2		
		Filter 143 (Pale Navy Blue)	106	108	41.6	42.4		
		Filter 147 (Apricot)	109	111	42.7	43.5		
		Filter 148 (Bright Rose)	112	114	43.9	44.7		
		Filter 152 (Pale Gold)	115	117	45.1	45.9		
		Filter 154 (Pale Rose)	118	120	46.3	47.1		
		Filter 157 (Pink)	121	123	47.5	48.2		
		Filter 162 (Bastard Amber)	124	126	48.6	49.4		
		Filter 164 (Flame Red)	127	129	49.8	50.6		
		Filter 165 (Daylight Blue)	130	132	51.0	51.8		
		Filter 169 (Lilac Tint)	133	135	52.2	52.9		
		Filter 170 (Deep Lavender)	136	138	53.3	54.1		
		Filter 172 (Lagoon Blue)	139	141	54.5	55.3		
		Filter 180 (Dark Lavender)	142	144	55.7	56.5		
		Filter 182 (Light Red)	145	147	56.9	57.6		
		Filter 194 (Surprise Pink)	148	150	58.0	58.8		
		Filter 197 (Alice Blue)	151	153	59.2	60.0		
		Filter 201 (Full C.T. Blue)	154	156	60.4	61.2		
		Filter 202 (Half C.T. Blue)	157	159	61.6	62.4		
		Filter 203 (Quarter C.T. Blue)	160	162	62.7	63.5		
		Filter 204 (Full C.T. Orange)	163	165	63.9	64.7		
		Filter 206 (Quarter C.T. Orange)	166	168	65.1	65.9		
		Filter 219 (Fluorescent Green)	169	171	66.3	67.1		
		Filter 247 (Filter Minus Green)	172	174	67.5	68.2		
		Filter 248 (Half Minus Green)	175	177	68.6	69.4		
		Filter 281 (Three Quarter C.T. Blue)	178	180	69.8	70.6		
		Filter 285 (Three Qtr. C.T. Orange)	181	183	71.0	71.8		
		Filter 352 (Glacier Blue)	184	186	72.2	72.9		
		Filter 353 (Lighter Blue)	187	189	73.3	74.1		
		Filter 507 (Madge)	190	192	74.5	75.3		
		Filter 778 (Millennium Gold)	193	195	75.7	76.5		
		Filter 793 (Vanity Fair)	196	198	76.9	77.6		
		Filter 798 (Chrysalis Pink)	199	201	78.0	78.8		

Main Module: basic control (continued)

16 ctd.	Color wheel (continued)	HSI scroll, stop at first color	202	204	79.2	80.0	0	Snap
		HSI scroll slow → fast	205	252	80.4	98.8		Fade
		HSI scroll, stop at current color	253	255	99.2	100		Snap
17	Color Temperature Control	Open	0	9	0	3.5	0	Snap
		Fade through color temperatures of 10 000 K to 2 500 K stepless (interpolation)	10	255	4.3	100		Fade
18	CQC (Color Quality Control) / Saturation	HQ (high quality), saturated color	0	9	0	3.5	0	Snap
		Crossfade, saturated to unsaturated color	10	117	3.9	45.9		Fade
		HQ (high quality), unsaturated color	118	127	46.3	49.8		Snap
		HO (high output), unsaturated color	128	137	50.2	53.7		Fade
		Crossfade, unsaturated to saturated color	138	245	54.1	96.1		Snap
		HO (high output), saturated color	246	255	96.5	100		Snap
19	M/G shift	Off (no correction)	0	9	0	3.5	0	Snap
		Full plus magenta +100%	10	10	3.9	3.9		Fade
		Plus magenta +99% → +1%	11	124	4.3	48.6		Snap
		Neutral / no correction	125	140	49.0	54.9		Fade
		Plus green +1% → +99%	141	254	55.3	99.6		Snap
		Full plus green +100%	255	255	100	100		Snap
20	Tungsten effect	Off	0	9	0	3.5	0	Snap
		Tungsten ACL 250W/28V	10	19	3.9	7.5		
		Tungsten Blinder 650W/120V	20	29	7.8	11.4		
		Tungsten 750W/80V	30	39	11.8	15.3		
		Tungsten 1000W/240V	40	49	15.7	19.2		
		Tungsten 1200W/240V	50	59	19.6	23.1		
		Tungsten 2000W/230V	60	69	23.5	27.1		
		Tungsten 2500W/230V	70	79	27.5	31.0		
		Tungsten 5000W/230V	80	89	31.4	34.9		
		No function (off)	90	120	35.3	47.1		
		Off	120	139	47.1	54.5		
		FX Tungsten ACL 250W/28V	140	149	54.9	58.4		
		FX Tungsten Blinder 650W/120V	150	159	58.8	62.4		
		FX Tungsten 750W/80V	160	169	62.7	66.3		
		FX Tungsten 1000W/240V	170	179	66.7	70.2		
		FX Tungsten 1200W/240V	180	189	70.6	74.1		
		FX Tungsten 2000W/230V	190	199	74.5	78.0		
		FX Tungsten 2500W/230V	200	209	78.4	82.0		
		FX Tungsten 5000W/230V	210	219	82.4	85.9		
		No function (off)	220	255	86.3	100		

Main Module: basic control (continued)

21	Mix priority	Main Module and Sub Module HTP (highest value takes priority)	0	9	0	3.5	0	Snap
		Main only (Main Module color takes priority)	10	19	3.9	7.5		
		Sub only (Sub Module color takes priority)	20	29	7.8	11.4		
		Main and Sub additive (Sub Module color value added to Main Module color value)	30	39	11.8	15.3		
		Main minus Sub Module subtractive (Sub Module color value subtracted from Main)	40	49	15.7	19.2		
		Sub Module minus main subtractive (Main Module color value subtracted from Sub Module)	50	59	19.6	23.1		
		TrueColor 1: Main over Sub – snap	60	69	23.5	27.1		Snap
		TrueColor 2: Sub over Main – snap	70	79	27.5	31.0		
		TrueColor 3: Main over Sub – crossfade	80	89	31.4	34.9		Fade
		TrueColor 4: Sub over Main – crossfade	90	99	35.3	38.8		Fade
		No function	100	127	39.2	49.8		
		Main Module only	128	130	50.2	51.0		Snap
		Crossfading Main → HTP	131	190	51.4	74.5		Fade
		Main and Sub Modules (HTP)	191	192	74.9	75.3		Snap
		Crossfading HTP → Sub	193	252	75.7	98.8		Fade
		Sub Module only	253	255	99.2	100		Snap

Sub Module: second layer control

22	Intensity coarse	Intensity 0 → 100%	0	65535	0	100	0	Fade
23	Intensity fine							
24	Shutter	Closed	0	4	0	1.6	0	Snap
		Single flash if value changed within the range 005 → 009	5	9	2.0	3.5		Fade
		Pulse slow → fast	10	39	3.9	15.3		Fade
		Pulse opening slow → fast	40	69	15.7	27.1		Fade
		Pulse closing slow → fast	70	99	27.5	38.8		Fade
		Double flash slow → fast	100	129	39.2	50.6		Fade
		Strobe random pixel slow → fast	130	159	51.0	62.4		Fade
		Strobe random all slow → fast	160	199	62.7	78.0		Fade
		Strobe sync all pixel slow → fast	200	250	78.4	98.0		Fade
		Open	251	255	98.4	100		Snap
25	Pattern selection	Off (all pixels active)	0	9	0	3.5	0	Snap
		Static Pattern 01	10	11	3.9	4.3		
		Static Pattern 02	12	13	4.7	5.1		
		Static Pattern 03	14	15	5.5	5.9		
		Static Pattern 04	16	17	6.3	6.7		
		Static Pattern 05	18	19	7.1	7.5		
		Static Pattern 06	20	21	7.8	8.2		
		Static Pattern 07	22	23	8.6	9.0		
		Static Pattern 08	24	25	9.4	9.8		
		Static Pattern 09	26	27	10.2	10.6		
		Static Pattern 10	28	29	11.0	11.4		
		Static Pattern 11	30	31	11.8	12.2		

Sub Module: second layer control (continued)

25 ctd.	Pattern selection continued	Static Pattern 12	32	33	12.5	12.9	0	Snap
		Static Pattern 13	34	35	13.3	13.7		
		Static Pattern 14	36	37	14.1	14.5		
		Static Pattern 15	38	39	14.9	15.3		
		Static Pattern 16	40	41	15.7	16.1		
		Static Pattern 17	52	43	20.4	16.9		
		Static Pattern 18	44	45	17.3	17.6		
		Static Pattern 19	46	47	18.0	18.4		
		Static Pattern 20	48	49	18.8	19.2		
		Static Pattern 21	50	51	19.6	20.0		
		Static Pattern 22	52	53	20.4	20.8		
		Static Pattern 23	54	55	21.2	21.6		
		Static Pattern 24	56	57	22.0	22.4		
		Static Pattern 25	58	59	22.7	23.1		
		Static Pattern 26	60	61	23.5	23.9		
		Static Pattern 27	62	63	24.3	24.7		
		Static Pattern 28	64	65	25.1	25.5		
		Static Pattern 29	66	67	25.9	26.3		
		Static Pattern 30	68	69	26.7	27.1		
		Static Pattern 31	70	71	27.5	27.8		
		Static Pattern 32	72	73	28.2	28.6		
		Static Pattern 33	74	75	29.0	29.4		
		Static Pattern 34	76	77	29.8	30.2		
		Static Pattern 35	78	79	30.6	31.0		
		Static Pattern 36	80	81	31.4	31.8		
		Static Pattern 37	82	83	32.2	32.5		
		Static Pattern 38	84	85	32.9	33.3		
		Static Pattern 39	86	87	33.7	34.1		
		Static Pattern 40	88	89	34.5	34.9		
		Static Pattern 41	90	91	35.3	35.7		
		Static Pattern 42	92	93	36.1	36.5		
		Static Pattern 43	94	95	36.9	37.3		
		Static Pattern 44	96	97	37.6	38.0		
		Static Pattern 45	98	99	38.4	38.8		
		Static Pattern 46	100	101	39.2	39.6		
		Static Pattern 47	102	103	40.0	40.4		
		Static Pattern 48	104	105	40.8	41.2		
		Static Pattern 49	106	107	41.6	42.0		
		Static Pattern 50	108	109	42.4	42.7		
		Static Pattern 51	110	111	43.1	43.5		
		Static Pattern 52	112	113	43.9	44.3		
		Static Pattern 53	114	115	44.7	45.1		
		Static Pattern 54	116	117	45.5	45.9		
		Static Pattern 55	118	119	46.3	46.7		
		Static Pattern 56	120	121	47.1	47.5		
		Static Pattern 57	122	123	47.8	48.2		
		Static Pattern 58	124	125	48.6	49.0		
		Static Pattern 59	126	127	49.4	49.8		
		Dynamic Pattern 01	128	129	50.2	50.6		
		Dynamic Pattern 02	130	131	51.0	51.4		
		Dynamic Pattern 03	132	133	51.8	52.2		
		Dynamic Pattern 04	134	135	52.5	52.9		
		Dynamic Pattern 05	136	137	53.3	53.7		
		Dynamic Pattern 06	138	139	54.1	54.5		
		Dynamic Pattern 07	140	141	54.9	55.3		

Sub Module: second layer control (continued)

25	Pattern selection (continued)	Dynamic Pattern 08	142	143	55.7	56.1	0	Snap
		Dynamic Pattern 09	144	145	56.5	56.9		
		Dynamic Pattern 10	146	147	57.3	57.6		
		Dynamic Pattern 11	148	149	58.0	58.4		
		Dynamic Pattern 12	150	151	58.8	59.2		
		Dynamic Pattern 13	152	153	59.6	60.0		
		Dynamic Pattern 14	154	155	60.4	60.8		
		Dynamic Pattern 15	156	157	61.2	61.6		
		Dynamic Pattern 16	158	159	62.0	62.4		
		Dynamic Pattern 17	160	161	62.7	63.1		
		Dynamic Pattern 18	162	163	63.5	63.9		
		Dynamic Pattern 19	164	165	64.3	64.7		
		Dynamic Pattern 20	166	167	65.1	65.5		
		Dynamic Pattern 21	168	169	65.9	66.3		
		Dynamic Pattern 22	170	171	66.7	67.1		
		Dynamic Pattern 23	172	173	67.5	67.8		
		Dynamic Pattern 24	174	175	68.2	68.6		
		Dynamic Pattern 25	176	177	69.0	69.4		
		Dynamic Pattern 26	178	179	69.8	70.2		
		Dynamic Pattern 27	180	181	70.6	71.0		
		Dynamic Pattern 28	182	183	71.4	71.8		
		Dynamic Pattern 29	184	185	72.2	72.5		
		Dynamic Pattern 30	186	187	72.9	73.3		
		Dynamic Pattern 31	188	189	73.7	74.1		
		Dynamic Pattern 32	190	191	74.5	74.9		
		Dynamic Pattern 33	192	193	75.3	75.7		
		Dynamic Pattern 34	194	195	76.1	76.5		
		Dynamic Pattern 35	196	197	76.9	77.3		
		Dynamic Pattern 36	198	199	77.6	78.0		
		Dynamic Pattern 37	200	201	78.4	78.8		
		Dynamic Pattern 38	202	203	79.2	79.6		
		Dynamic Pattern 39	204	205	80.0	80.4		
		Dynamic Pattern 40	206	207	80.8	81.2		
		Dynamic Pattern 41	208	209	81.6	82.0		
		Dynamic Pattern 42	210	211	82.4	82.7		
		Dynamic Pattern 43	212	213	83.1	83.5		
		Dynamic Pattern 44	214	215	83.9	84.3		
		Dynamic Pattern 45	216	217	84.7	85.1		
		Dynamic Pattern 46	218	219	85.5	85.9		
		Dynamic Pattern 47	220	221	86.3	86.7		
		Dynamic Pattern 48	222	223	87.1	87.5		
		Dynamic Pattern 49	224	225	87.8	88.2		
		Dynamic Pattern 50	226	227	88.6	89.0		
		Special Pattern 01	228	229	89.4	89.8		
		Special Pattern 02	230	231	90.2	90.6		
		Special Pattern 03	232	233	91.0	91.4		
		Special Pattern 04	234	235	91.8	92.2		
		Special Pattern 05	236	237	92.5	92.9		
		Special Pattern 06	238	239	93.3	93.7		
		Special Pattern 07	240	241	94.1	94.5		
		Special Pattern 08	242	243	94.9	95.3		
		Special Pattern 09	244	245	95.7	96.1		
		Special Pattern 10	246	247	96.5	96.9		
		Special Pattern 11	248	249	97.3	97.6		
		Random Pixel	250	255	98.0	100		

Sub Module: second layer control (continued)

26	Pattern step / speed continued	Stop (first pattern step)	0	2	0.0	0.8	0	Snap
		CW fast → slow (run pattern step 1 → n)	3	63	1.2	24.7		
		Stop at current position	64	66	25.1	25.9		
		CCW slow → fast (run pattern step n → 1)	67	127	26.3	49.8		
		Pattern Step 01	128	129	50.2	50.6		
		Pattern Step 02	130	131	51.0	51.4		
		Pattern Step 03	132	133	51.8	52.2		
		Pattern Step 04	134	135	52.5	52.9		
		Pattern Step 05	136	137	53.3	53.7		
		Pattern Step 06	138	139	54.1	54.5		
		Pattern Step 07	140	141	54.9	55.3		
		Pattern Step 08	142	143	55.7	56.1		
		Pattern Step 09	144	145	56.5	56.9		
		Pattern Step 10	146	147	57.3	57.6		
		Pattern Step 11	148	149	58.0	58.4		
		Pattern Step 12	150	151	58.8	59.2		
		Pattern Step 13	152	153	59.6	60.0		
		Pattern Step 14	154	155	60.4	60.8		
		Pattern Sep 15	156	157	61.2	61.6		
		Pattern Step 16	158	159	62.0	62.4		
		Pattern Step 17	160	161	62.7	63.1		
		Pattern Step 18	162	163	63.5	63.9		
		Pattern Step 19	164	165	64.3	64.7		
		Pattern Step 20	166	167	65.1	65.5		
		Pattern Step 21	168	169	65.9	66.3		
		Pattern Step 22	170	171	66.7	67.1		
		Pattern Step 23	172	173	67.5	67.8		
		Pattern Step 24	174	175	68.2	68.6		
		Pattern Step 25	176	177	69.0	69.4		
		Pattern Step 26	178	179	69.8	70.2		
		Pattern Step 27	180	181	70.6	71.0		
		Pattern Step 28	182	183	71.4	71.8		
		Pattern Step 29	184	185	72.2	72.5		
		Pattern Step 30	186	187	72.9	73.3		
		Pattern Step 31	188	189	73.7	74.1		
		Pattern Step 32	190	191	74.5	74.9		
		Pattern Step 33	192	193	75.3	75.7		
		Pattern Step 34	194	195	76.1	76.5		
		Pattern Step 35	196	197	76.9	77.3		
		Pattern Step 36	198	199	77.6	78.0		
		Pattern Step 37	200	201	78.4	78.8		
		Pattern Step 41	208	209	81.6	82.0		
		Pattern Step 42	210	211	82.4	82.7		
		Pattern Step 43	212	213	83.1	83.5		
		Pattern Step 41	208	209	81.6	82.0		
		Pattern Step 42	210	211	82.4	82.7		
		Pattern Step 43	212	213	83.1	83.5		
		Pattern Step 44	214	215	83.9	84.3		
		Pattern Step 45	216	217	84.7	85.1		
		Pattern Step 46	218	219	85.5	85.9		
		Pattern Step 47	220	221	86.3	86.7		
		Pattern Step 48	222	223	87.1	87.5		

Sub Module: second layer control (continued)

26 ctd.	Pattern step / speed continued	Pattern Step 49	224	225	87.8	88.2	0	Snap
		Pattern Step 50	226	227	88.6	89.0		
		Pattern Step 51	228	229	89.4	89.8		
		Pattern Step 52	230	231	90.2	90.6		
		Pattern Step 53	232	233	91.0	91.4		
		Pattern Step 54	234	235	91.8	92.2		
		Pattern Step 55	236	237	92.5	92.9		
		Pattern Step 56	238	239	93.3	93.7		
		Pattern Step 57	240	241	94.1	94.5		
		Pattern Step 58	242	243	94.9	95.3		
		Pattern Step 59	244	245	95.7	96.1		
		Pattern Step 60	246	247	96.5	96.9		
		Pattern Step 61	248	249	97.3	97.6		
		Pattern Step 62	250	251	98.0	98.4		
		Pattern Step 63	252	253	98.8	99.2		
		Pattern Step 64	254	255	99.6	100.0		
27	Pattern step crossfading (from one step to next)	Off (no crossfading, Snap)	0	9	0	3.5	0	Snap
		Crossfading: Snap → min. Xfade → max. Xfade (fade in and fade out times are identical)	10	127	3.9	49.8		Fade
		Off (no crossfading, Snap)	128	137	50.2	53.7		Snap
		Crossfading with tail: Snap → min. Xfade with tail → max. Xfade with tail (fade in time is shorter than fade out time)	138	255	54.1	100		Fade
28	Pattern transition (from one pattern to next)	Off (snap from one pattern to next)	0	9	0	3.5	0	Snap
		Normal transition (snap → fade 5s)	10	63	3.9	24.7		Fade
		Off (snap from one pattern to next)	64	73	25.1	28.6		Snap
		FOB (Fade Over Blackout) transition (snap → fade 5s)	74	127	29.0	49.8		Fade
		Off (snap from one pattern to next)	128	137	50.2	53.7		Snap
		FOF (Fade Over Full) transition (snap → fade 5s)	138	191	54.1	74.9		Fade
		No function	192	255	75.3	100.0		
29	Fixture total number	Off	0	0	0	0	0	Snap
		1 fixture in total	1	1	0.4	0.4		
		2 fixtures in total	2	2	0.8	0.8		
		3...254 fixtures in total	3	254	1.2	99.6		
		255 fixtures in total	255	255	100	100		
30	Fixture position	Off	0	0	0	0	0	Snap
		Fixture in position 1	1	1	0.4	0.4		
		Fixture in position 2	2	2	0.8	0.8		
		Fixture in position 3 ... 254	3	254	1.2	99.6		
		Fixture in position 255	255	255	100	100		
31	Red, pixel 01-18	Intensity 0 → 100%	0	255	0	100	0	Fade
32	Green, pixel 01-18	Intensity 0 → 100%	0	255	0	100	0	Fade
33	Blue, pixel 01-18	Intensity 0 → 100%	0	255	0	100	0	Fade

DMX Mode 3: Segments

48 DMX Channels

Channel	Command		DMX range		Percent		Default DMX	Fade
Main Module: basic control								
1	Tilt coarse	Tilt back → front	0	65535	0	100	32768	Fade
2	Tilt fine							
3	Intensity coarse	Intensity 0 → 100%	0	65535	0	100	32768	Fade
4	Intensity fine							
5	Shutter	Closed	0	4	0	1.6	255	Snap
		Single flash each time value is changed within range 005 → 009	5	9	2.0	3.5		Snap
		Pulse slow → fast	10	39	3.9	15.3		Fade
		Opening pulse slow → fast	40	69	15.7	27.1		Fade
		Closing pulse slow → fast	70	99	27.5	38.8		Fade
		Double flash slow → fast	100	129	39.2	50.6		Fade
		Random pixel strobe slow → fast	130	159	51.0	62.4		Fade
		Random all strobe slow → fast	160	199	62.7	78.0		Fade
		Strobe sync all pixels slow → fast	200	250	78.4	98.0		Fade
		Open	251	255	98.4	100		Snap
6	Zoom	Zoom narrow → wide	0	255	0	100	0	Fade
7	Control/Settings	See 'Control / Settings channel' on page 79						
8	RGB / RGBL / x,y color control (see also 'Key to conversion of x and y coordinates' on page 8181)	[1] RGB - Red coarse [2] RGBL - Red coarse [3] x;y - x coarse	0	65535	0	100	65535	Fade
9		[1] RGB - Red fine [2] RGBL - Red fine [3] x;y - x fine						
10		[1] RGB - Green coarse [2] RGBL - Green coarse [3] x;y - y coarse	0	65535	0	100	65535	Fade
11		[1] RGB - Green fine [2] RGBL - Green fine [3] x;y - y fine						
12		[1] RGB - Blue coarse [2] RGBL - Blue coarse [3] x;y - <i>not used</i>	0	65535	0	100	65535	Fade
13		[1] RGB - Blue fine [2] RGBL - Blue fine [3] x;y - <i>not used</i>						
14		[1] RGB - <i>not used</i> [2] RGBL - Lime coarse [3] x;y - <i>not used</i>	0	65535	0	100	65535	Fade
15		[1] RGB - <i>not used</i> [2] RGBL - Lime fine [3] x;y - <i>not used</i>						

Main Module: basic control (continued)

16	Color wheel (see also 'Color wheel specifications' on page 82)	Open	0	9	0	3.5	0	Snap
		Filter 004 (Medium Bastard Amber)	10	12	3.9	4.7		
		Filter 019 (Fire)	13	15	5.1	5.9		
		Filter 025 (Sunset Red)	16	18	6.3	7.1		
		Filter 026 (Bright Red)	19	21	7.5	8.2		
		Filter 036 (Medium Pink)	22	24	8.6	9.4		
		Filter 049 (Medium Purple)	25	27	9.8	10.6		
		Filter 058 (Lavender)	28	30	11.0	11.8		
		Filter 068 (Sky Blue)	31	33	12.2	12.9		
		Filter 088 (Lime Green)	34	36	13.3	14.1		
		Filter 089 (Moss Green)	37	39	14.5	15.3		
		Filter 090 (Dark Yellow Green)	40	42	15.7	16.5		
		Filter 102 (Light Amber)	43	45	16.9	17.6		
		Filter 103 (Straw)	46	48	18.0	18.8		
		Filter 106 (Primary Red)	49	51	19.2	20.0		
		Filter 111 (Dark Pink)	52	54	20.4	21.2		
		Filter 115 (Peacock Blue)	55	57	21.6	22.4		
		Filter 117 (Steel Blue)	58	60	22.7	23.5		
		Filter 118 (Light Blue)	61	63	23.9	24.7		
		Filter 121 (Filter Green)	64	66	25.1	25.9		
		Filter 122 (Fern Green)	67	69	26.3	27.1		
		Filter 124 (Dark Green)	70	72	27.5	28.2		
		Filter 126 (Mauve)	73	75	28.6	29.4		
		Filter 128 (Bright Pink)	76	78	29.8	30.6		
		Filter 131 (Marine Blue)	79	81	31.0	31.8		
		Filter 132 (Medium Blue)	82	84	32.2	32.9		
		Filter 134 (Golden Amber)	85	87	33.3	34.1		
		Filter 135 (Deep Golden Amber)	88	90	34.5	35.3		
		Filter 136 (Pale Lavender)	91	93	35.7	36.5		
		Filter 137 (Special Lavender)	94	96	36.9	37.6		
		Filter 138 (Pale Green)	97	99	38.0	38.8		
		Filter 140 (Summer Blue)	100	102	39.2	40.0		
		Filter 141 (Bright Blue)	103	105	40.4	41.2		
		Filter 143 (Pale Navy Blue)	106	108	41.6	42.4		
		Filter 147 (Apricot)	109	111	42.7	43.5		
		Filter 148 (Bright Rose)	112	114	43.9	44.7		
		Filter 152 (Pale Gold)	115	117	45.1	45.9		
		Filter 154 (Pale Rose)	118	120	46.3	47.1		
		Filter 157 (Pink)	121	123	47.5	48.2		
		Filter 162 (Bastard Amber)	124	126	48.6	49.4		
		Filter 164 (Flame Red)	127	129	49.8	50.6		
		Filter 165 (Daylight Blue)	130	132	51.0	51.8		
		Filter 169 (Lilac Tint)	133	135	52.2	52.9		
		Filter 170 (Deep Lavender)	136	138	53.3	54.1		
		Filter 172 (Lagoon Blue)	139	141	54.5	55.3		
		Filter 180 (Dark Lavender)	142	144	55.7	56.5		
		Filter 182 (Light Red)	145	147	56.9	57.6		
		Filter 194 (Surprise Pink)	148	150	58.0	58.8		
		Filter 197 (Alice Blue)	151	153	59.2	60.0		
		Filter 201 (Full C.T. Blue)	154	156	60.4	61.2		
		Filter 202 (Half C.T. Blue)	157	159	61.6	62.4		
		Filter 203 (Quarter C.T. Blue)	160	162	62.7	63.5		
		Filter 204 (Full C.T. Orange)	163	165	63.9	64.7		

Main Module: basic control (continued)

16 ctd.	Color wheel (continued)	Filter 206 (Quarter C.T. Orange)	166	168	65.1	65.9	0	Snap
		Filter 219 (Fluorescent Green)	169	171	66.3	67.1		
		Filter 247 (Filter Minus Green)	172	174	67.5	68.2		
		Filter 248 (Half Minus Green)	175	177	68.6	69.4		
		Filter 281 (Three Quarter C.T. Blue)	178	180	69.8	70.6		
		Filter 285 (Three Qtr. C.T. Orange)	181	183	71.0	71.8		
		Filter 352 (Glacier Blue)	184	186	72.2	72.9		
		Filter 353 (Lighter Blue)	187	189	73.3	74.1		
		Filter 507 (Madge)	190	192	74.5	75.3		
		Filter 778 (Millennium Gold)	193	195	75.7	76.5		
		Filter 793 (Vanity Fair)	196	198	76.9	77.6		
		Filter 798 (Chrysalis Pink)	199	201	78.0	78.8		
		HSI scroll, stop at first color	202	204	79.2	80.0		Snap
		HSI scroll slow → fast	205	252	80.4	98.8		Fade
		HSI scroll, stop at current color	253	255	99.2	100		Snap
17	Color Temperature Control	Open	0	9	0	3.5	0	Snap
		Fade through color temperatures of 10 000 K to 2 500 K stepless (interpolation)	10	255	4.3	100		Fade
18	CQC (Color Quality Control) / Saturation	HQ (high quality), saturated color	0	9	0	3.5	0	Snap
		Crossfade, saturated to unsaturated color	10	117	3.9	45.9		Fade
		HQ (high quality), unsaturated color	118	127	46.3	49.8		Snap
		HO (high output), unsaturated color	128	137	50.2	53.7		
		Crossfade, unsaturated to saturated color	138	245	54.1	96.1		Fade
		HO (high output), saturated color	246	255	96.5	100		Snap
19	M/G shift	Off (no correction)	0	9	0	3.5	0	Snap
		Full plus magenta +100%	10	10	3.9	3.9		Fade
		Plus magenta +99% → +1%	11	124	4.3	48.6		
		Neutral / no correction	125	140	49.0	54.9		Snap
		Plus green +1% → +99%	141	254	55.3	99.6		Fade
		Full plus green +100%	255	255	100	100		Snap
20	Tungsten effect	Off	0	9	0	3.5	0	Snap
		Tungsten ACL 250W/28V	10	19	3.9	7.5		
		Tungsten Blinder 650W/120V	20	29	7.8	11.4		
		Tungsten 750W/80V	30	39	11.8	15.3		
		Tungsten 1000W/240V	40	49	15.7	19.2		
		Tungsten 1200W/240V	50	59	19.6	23.1		
		Tungsten 2000W/230V	60	69	23.5	27.1		
		Tungsten 2500W/230V	70	79	27.5	31.0		
		Tungsten 5000W/230V	80	89	31.4	34.9		
		No function (off)	90	120	35.3	47.1		
		Off	120	139	47.1	54.5		
		FX Tungsten ACL 250W/28V	140	149	54.9	58.4		
		FX Tungsten Blinder 650W/120V	150	159	58.8	62.4		
		FX Tungsten 750W/80V	160	169	62.7	66.3		
		FX Tungsten 1000W/240V	170	179	66.7	70.2		

Main Module: basic control (continued)

20 ctd.	Tungsten effect (continued)	FX Tungsten 1200W/240V	180	189	70.6	74.1	0	Snap
		FX Tungsten 2000W/230V	190	199	74.5	78.0		
		FX Tungsten 2500W/230V	200	209	78.4	82.0		
		FX Tungsten 5000W/230V	210	219	82.4	85.9		
		No function (off)	220	255	86.3	100		
21	Mix priority	Main Module and Sub Module HTP (highest value takes priority)	0	9	0	3.5	0	Snap
		Main only (Main Module color takes priority)	10	19	3.9	7.5		
		Sub only (Sub Module color takes priority)	20	29	7.8	11.4		
		Main and Sub additive (Sub Module color value added to Main Module color value)	30	39	11.8	15.3		
		Main minus Sub Module subtractive (Sub Module color value subtracted from Main)	40	49	15.7	19.2		
		Sub Module minus main subtractive (Main Module color value subtracted from Sub Module)	50	59	19.6	23.1		
		TrueColor 1: Main over Sub – snap	60	69	23.5	27.1		Snap
		TrueColor 2: Sub over Main – snap	70	79	27.5	31.0		Fade
		TrueColor 3: Main over Sub – crossfade	80	89	31.4	34.9		Fade
		TrueColor 4: Sub over Main – crossfade	90	99	35.3	38.8		
		No function	100	127	39.2	49.8		Snap
		Main Module only	128	130	50.2	51.0		Fade
		Crossfading Main → HTP	131	190	51.4	74.5		Snap
		Main and Sub Modules (HTP)	191	192	74.9	75.3		Fade
		Crossfading HTP → Sub	193	252	75.7	98.8		Snap
		Sub Module only	253	255	99.2	100		

Sub Module: second layer control

22	Intensity coarse	Intensity 0 → 100%	0	65535	0	100	0	Fade
23	Intensity fine							
24	Shutter	Closed	0	4	0	1.6	0	Snap
		Single flash if value changed within the range 005 → 009	5	9	2.0	3.5		Fade
		Pulse slow → fast	10	39	3.9	15.3		Fade
		Pulse opening slow → fast	40	69	15.7	27.1		Fade
		Pulse closing slow → fast	70	99	27.5	38.8		Fade
		Double flash slow → fast	100	129	39.2	50.6		Fade
		Strobe random pixel slow → fast	130	159	51.0	62.4		Fade
		Strobe random all slow → fast	160	199	62.7	78.0		Fade
		Strobe sync all pixel slow → fast	200	250	78.4	98.0		Fade
		Open	251	255	98.4	100		Snap

Sub Module: second layer control (continued)

25	Pattern selection	Off (all pixels active)	0	9	0	3.5	0	Snap
		Static Pattern 01	10	11	3.9	4.3		
		Static Pattern 02	12	13	4.7	5.1		
		Static Pattern 03	14	15	5.5	5.9		
		Static Pattern 04	16	17	6.3	6.7		
		Static Pattern 05	18	19	7.1	7.5		
		Static Pattern 06	20	21	7.8	8.2		
		Static Pattern 07	22	23	8.6	9.0		
		Static Pattern 08	24	25	9.4	9.8		
		Static Pattern 09	26	27	10.2	10.6		
		Static Pattern 10	28	29	11.0	11.4		
		Static Pattern 11	30	31	11.8	12.2		
		Static Pattern 12	32	33	12.5	12.9		
		Static Pattern 13	34	35	13.3	13.7		
		Static Pattern 14	36	37	14.1	14.5		
		Static Pattern 15	38	39	14.9	15.3		
		Static Pattern 16	40	41	15.7	16.1		
		Static Pattern 17	52	43	20.4	16.9		
		Static Pattern 18	44	45	17.3	17.6		
		Static Pattern 19	46	47	18.0	18.4		
		Static Pattern 20	48	49	18.8	19.2		
		Static Pattern 21	50	51	19.6	20.0		
		Static Pattern 22	52	53	20.4	20.8		
		Static Pattern 23	54	55	21.2	21.6		
		Static Pattern 24	56	57	22.0	22.4		
		Static Pattern 25	58	59	22.7	23.1		
		Static Pattern 26	60	61	23.5	23.9		
		Static Pattern 27	62	63	24.3	24.7		
		Static Pattern 28	64	65	25.1	25.5		
		Static Pattern 29	66	67	25.9	26.3		
		Static Pattern 30	68	69	26.7	27.1		
		Static Pattern 31	70	71	27.5	27.8		
		Static Pattern 32	72	73	28.2	28.6		
		Static Pattern 33	74	75	29.0	29.4		
		Static Pattern 34	76	77	29.8	30.2		
		Static Pattern 35	78	79	30.6	31.0		
		Static Pattern 36	80	81	31.4	31.8		
		Static Pattern 37	82	83	32.2	32.5		
		Static Pattern 38	84	85	32.9	33.3		
		Static Pattern 39	86	87	33.7	34.1		
		Static Pattern 40	88	89	34.5	34.9		
		Static Pattern 41	90	91	35.3	35.7		
		Static Pattern 42	92	93	36.1	36.5		
		Static Pattern 43	94	95	36.9	37.3		
		Static Pattern 44	96	97	37.6	38.0		
		Static Pattern 45	98	99	38.4	38.8		
		Static Pattern 46	100	101	39.2	39.6		
		Static Pattern 47	102	103	40.0	40.4		
		Static Pattern 48	104	105	40.8	41.2		
		Static Pattern 49	106	107	41.6	42.0		
		Static Pattern 50	108	109	42.4	42.7		
		Static Pattern 51	110	111	43.1	43.5		
		Static Pattern 52	112	113	43.9	44.3		

Sub Module: second layer control (continued)

25	Pattern selection (continued)	Static Pattern 53	114	115	44.7	45.1	0	Snap
		Static Pattern 54	116	117	45.5	45.9		
		Static Pattern 55	118	119	46.3	46.7		
		Static Pattern 56	120	121	47.1	47.5		
		Static Pattern 57	122	123	47.8	48.2		
		Static Pattern 58	124	125	48.6	49.0		
		Static Pattern 59	126	127	49.4	49.8		
		Dynamic Pattern 01	128	129	50.2	50.6		
		Dynamic Pattern 02	130	131	51.0	51.4		
		Dynamic Pattern 03	132	133	51.8	52.2		
		Dynamic Pattern 04	134	135	52.5	52.9		
		Dynamic Pattern 05	136	137	53.3	53.7		
		Dynamic Pattern 06	138	139	54.1	54.5		
		Dynamic Pattern 07	140	141	54.9	55.3		
		Dynamic Pattern 08	142	143	55.7	56.1		
		Dynamic Pattern 09	144	145	56.5	56.9		
		Dynamic Pattern 10	146	147	57.3	57.6		
		Dynamic Pattern 11	148	149	58.0	58.4		
		Dynamic Pattern 12	150	151	58.8	59.2		
		Dynamic Pattern 13	152	153	59.6	60.0		
		Dynamic Pattern 14	154	155	60.4	60.8		
		Dynamic Pattern 15	156	157	61.2	61.6		
		Dynamic Pattern 16	158	159	62.0	62.4		
		Dynamic Pattern 17	160	161	62.7	63.1		
		Dynamic Pattern 18	162	163	63.5	63.9		
		Dynamic Pattern 19	164	165	64.3	64.7		
		Dynamic Pattern 20	166	167	65.1	65.5		
		Dynamic Pattern 21	168	169	65.9	66.3		
		Dynamic Pattern 22	170	171	66.7	67.1		
		Dynamic Pattern 23	172	173	67.5	67.8		
		Dynamic Pattern 24	174	175	68.2	68.6		
		Dynamic Pattern 25	176	177	69.0	69.4		
		Dynamic Pattern 26	178	179	69.8	70.2		
		Dynamic Pattern 27	180	181	70.6	71.0		
		Dynamic Pattern 28	182	183	71.4	71.8		
		Dynamic Pattern 29	184	185	72.2	72.5		
		Dynamic Pattern 30	186	187	72.9	73.3		
		Dynamic Pattern 31	188	189	73.7	74.1		
		Dynamic Pattern 32	190	191	74.5	74.9		
		Dynamic Pattern 33	192	193	75.3	75.7		
		Dynamic Pattern 34	194	195	76.1	76.5		
		Dynamic Pattern 35	196	197	76.9	77.3		
		Dynamic Pattern 36	198	199	77.6	78.0		
		Dynamic Pattern 37	200	201	78.4	78.8		
		Dynamic Pattern 38	202	203	79.2	79.6		
		Dynamic Pattern 39	204	205	80.0	80.4		
		Dynamic Pattern 40	206	207	80.8	81.2		
		Dynamic Pattern 41	208	209	81.6	82.0		
		Dynamic Pattern 42	210	211	82.4	82.7		
		Dynamic Pattern 43	212	213	83.1	83.5		
		Dynamic Pattern 44	214	215	83.9	84.3		
		Dynamic Pattern 45	216	217	84.7	85.1		
		Dynamic Pattern 46	218	219	85.5	85.9		
		Dynamic Pattern 47	220	221	86.3	86.7		

Sub Module: second layer control (continued)

25 ctd.	Pattern selection (continued)	Dynamic Pattern 48	222	223	87.1	87.5	0	Snap
		Dynamic Pattern 49	224	225	87.8	88.2		
		Dynamic Pattern 50	226	227	88.6	89.0		
		Special Pattern 01	228	229	89.4	89.8		
		Special Pattern 02	230	231	90.2	90.6		
		Special Pattern 03	232	233	91.0	91.4		
		Special Pattern 04	234	235	91.8	92.2		
		Special Pattern 05	236	237	92.5	92.9		
		Special Pattern 06	238	239	93.3	93.7		
		Special Pattern 07	240	241	94.1	94.5		
		Special Pattern 08	242	243	94.9	95.3		
		Special Pattern 09	244	245	95.7	96.1		
		Special Pattern 10	246	247	96.5	96.9		
		Special Pattern 11	248	249	97.3	97.6		
		Random Pixel	250	255	98.0	100		
26	Pattern step / speed	Stop (first pattern step)	0	2	0.0	0.8	0	Snap
		CW fast → slow (run pattern step 1 → n)	3	63	1.2	24.7		
		Stop at current position	64	66	25.1	25.9		
		CCW slow → fast (run pattern step n → 1)	67	127	26.3	49.8		
		Pattern Step 01	128	129	50.2	50.6		
		Pattern Step 02	130	131	51.0	51.4		
		Pattern Step 03	132	133	51.8	52.2		
		Pattern Step 04	134	135	52.5	52.9		
		Pattern Step 05	136	137	53.3	53.7		
		Pattern Step 06	138	139	54.1	54.5		
		Pattern Step 07	140	141	54.9	55.3		
		Pattern Step 08	142	143	55.7	56.1		
		Pattern Step 09	144	145	56.5	56.9		
		Pattern Step 10	146	147	57.3	57.6		
		Pattern Step 11	148	149	58.0	58.4		
		Pattern Step 12	150	151	58.8	59.2		
		Pattern Step 13	152	153	59.6	60.0		
		Pattern Step 14	154	155	60.4	60.8		
		Pattern Step 15	156	157	61.2	61.6		
		Pattern Step 16	158	159	62.0	62.4		
		Pattern Step 17	160	161	62.7	63.1		
		Pattern Step 18	162	163	63.5	63.9		
		Pattern Step 19	164	165	64.3	64.7		
		Pattern Step 20	166	167	65.1	65.5		
		Pattern Step 21	168	169	65.9	66.3		
		Pattern Step 22	170	171	66.7	67.1		
		Pattern Step 23	172	173	67.5	67.8		
		Pattern Step 24	174	175	68.2	68.6		
		Pattern Step 25	176	177	69.0	69.4		
		Pattern Step 26	178	179	69.8	70.2		
		Pattern Step 27	180	181	70.6	71.0		
		Pattern Step 28	182	183	71.4	71.8		
		Pattern Step 29	184	185	72.2	72.5		
		Pattern Step 30	186	187	72.9	73.3		
		Pattern Step 31	188	189	73.7	74.1		
		Pattern Step 32	190	191	74.5	74.9		
		Pattern Step 33	192	193	75.3	75.7		
		Pattern Step 34	194	195	76.1	76.5		

Sub Module: second layer control (continued)

26 ctd.	Pattern step / speed continued	Pattern Step 35	196	197	76.9	77.3	0	Snap
		Pattern Step 36	198	199	77.6	78.0		
		Pattern Step 37	200	201	78.4	78.8		
		Pattern Step 41	208	209	81.6	82.0		
		Pattern Step 42	210	211	82.4	82.7		
		Pattern Step 43	212	213	83.1	83.5		
		Pattern Step 41	208	209	81.6	82.0		
		Pattern Step 42	210	211	82.4	82.7		
		Pattern Step 43	212	213	83.1	83.5		
		Pattern Step 44	214	215	83.9	84.3		
		Pattern Step 45	216	217	84.7	85.1		
		Pattern Step 46	218	219	85.5	85.9		
		Pattern Step 47	220	221	86.3	86.7		
		Pattern Step 48	222	223	87.1	87.5		
		Pattern Step 49	224	225	87.8	88.2		
		Pattern Step 50	226	227	88.6	89.0		
		Pattern Step 51	228	229	89.4	89.8		
		Pattern Step 52	230	231	90.2	90.6		
		Pattern Step 53	232	233	91.0	91.4		
		Pattern Step 54	234	235	91.8	92.2		
		Pattern Step 55	236	237	92.5	92.9		
		Pattern Step 56	238	239	93.3	93.7		
		Pattern Step 57	240	241	94.1	94.5		
		Pattern Step 58	242	243	94.9	95.3		
		Pattern Step 59	244	245	95.7	96.1		
		Pattern Step 60	246	247	96.5	96.9		
		Pattern Step 61	248	249	97.3	97.6		
		Pattern Step 62	250	251	98.0	98.4		
		Pattern Step 63	252	253	98.8	99.2		
		Pattern Step 64	254	255	99.6	100.0		
27	Pattern step crossfading (from one step to next)	Off (no crossfading, Snap)	0	9	0	3.5	0	Snap
		Crossfading: Snap → min. Xfade → max. Xfade (fade in and fade out times are identical)	10	127	3.9	49.8		Fade
		Off (no crossfading, snap)	128	137	50.2	53.7		Snap
		Crossfading with tail: Snap → min. Xfade with tail → max. Xfade with tail (fade in time is shorter than fade out time)	138	255	54.1	100		Fade
28	Pattern transition (from one pattern to next)	Off (snap from one pattern to next)	0	9	0	3.5	0	Snap
		Normal transition (snap → fade 5s)	10	63	3.9	24.7		Fade
		Off (snap from one pattern to next)	64	73	25.1	28.6		Snap
		FOB (Fade Over Blackout) transition (snap → fade 5s)	74	127	29.0	49.8		Fade
		Off (snap from one pattern to next)	128	137	50.2	53.7		Snap
		FOF (Fade Over Full) transition (snap → fade 5s)	138	191	54.1	74.9		Fade
		No function	192	255	75.3	100.0		

Sub Module: second layer control (continued)

29	Fixture total number	Off	0	0	0	0	0	Snap
		1 fixture in total	1	1	0.4	0.4		
		2 fixtures in total	2	2	0.8	0.8		
		3...254 fixtures in total	3	254	1.2	99.6		
		255 fixtures in total	255	255	100	100		
30	Fixture position	Off	0	0	0	0	0	Snap
		Fixture in position 1	1	1	0.4	0.4		
		Fixture in position 2	2	2	0.8	0.8		
		Fixture in position 3 ... 254	3	254	1.2	99.6		
		Fixture in position 255	255	255	100	100		
31	Red, pixel 01-03	Intensity 0 → 100%	0	255	0	100	0	Fade
32	Green, pixel 01-03	Intensity 0 → 100%	0	255	0	100	0	Fade
33	Blue, pixel 01-03	Intensity 0 → 100%	0	255	0	100	0	Fade
34	Red, pixel 04-06	Intensity 0 → 100%	0	255	0	100	0	Fade
35	Green, pixel 04-06	Intensity 0 → 100%	0	255	0	100	0	Fade
36	Blue, pixel 04-06	Intensity 0 → 100%	0	255	0	100	0	Fade
37	Red, pixel 07-09	Intensity 0 → 100%	0	255	0	100	0	Fade
38	Green, pixel 07-09	Intensity 0 → 100%	0	255	0	100	0	Fade
39	Blue, pixel 07-09	Intensity 0 → 100%	0	255	0	100	0	Fade
40	Red, pixel 10-12	Intensity 0 → 100%	0	255	0	100	0	Fade
41	Green, pixel 10-12	Intensity 0 → 100%	0	255	0	100	0	Fade
42	Blue, pixel 10-12	Intensity 0 → 100%	0	255	0	100	0	Fade
43	Red, pixel 13-15	Intensity 0 → 100%	0	255	0	100	0	Fade
44	Green, pixel 13-15	Intensity 0 → 100%	0	255	0	100	0	Fade
45	Blue, pixel 13-15	Intensity 0 → 100%	0	255	0	100	0	Fade
46	Red, pixel 16-18	Intensity 0 → 100%	0	255	0	100	0	Fade
47	Green, pixel 16-18	Intensity 0 → 100%	0	255	0	100	0	Fade
48	Blue, pixel 16-18	Intensity 0 → 100%	0	255	0	100	0	Fade

DMX Mode 4: MultiPix Advanced

84 DMX Channels

Channel	Command		DMX range		Percent		Default DMX	Fade
Main Module: basic control								
1	Tilt coarse	Tilt back → front	0	65535	0	100	32768	Fade
2	Tilt fine							
3	Intensity coarse	Intensity 0 → 100%	0	65535	0	100	32768	Fade
4	Intensity fine							
5	Shutter	Closed	0	4	0	1.6	255	Snap
		Single flash each time value is changed within range 005 → 009	5	9	2.0	3.5		
		Pulse slow → fast	10	39	3.9	15.3		
		Opening pulse slow → fast	40	69	15.7	27.1		Fade
		Closing pulse slow → fast	70	99	27.5	38.8		
		Double flash slow → fast	100	129	39.2	50.6		
		Random pixel strobe slow → fast	130	159	51.0	62.4		
		Random all strobe slow → fast	160	199	62.7	78.0		
		Strobe sync all pixels slow → fast	200	250	78.4	98.0		
		Open	251	255	98.4	100		Snap
6	Zoom	Zoom narrow → wide	0	255	0	100	0	Fade
7	Control/Settings	See 'Control / Settings channel' on page 79						
8	RGB / RGBL / x,y color control (see also 'Key to conversion of x and y coordinates' on page 8181)	[1] RGB - Red coarse [2] RGBL - Red coarse [3] x;y - x coarse	0	65535	0	100	65535	Fade
9		[1] RGB - Red fine [2] RGBL - Red fine [3] x;y - x fine						
10		[1] RGB - Green coarse [2] RGBL - Green coarse [3] x;y - y coarse	0	65535	0	100	65535	Fade
11		[1] RGB - Green fine [2] RGBL - Green fine [3] x;y - y fine						
12		[1] RGB - Blue coarse [2] RGBL - Blue coarse [3] x;y - not used	0	65535	0	100	65535	Fade
13		[1] RGB - Blue fine [2] RGBL - Blue fine [3] x;y - not used						
14		[1] RGB - not used [2] RGBL - Lime coarse [3] x;y - not used	0	65535	0	100	65535	Fade
15		[1] RGB - not used [2] RGBL - Lime fine [3] x;y - not used						
16	Color wheel (see also 'Color wheel specifications' on page 82)	Open	0	9	0	3.5	0	Snap
		Filter 004 (Medium Bastard Amber)	10	12	3.9	4.7		
		Filter 019 (Fire)	13	15	5.1	5.9		
		Filter 025 (Sunset Red)	16	18	6.3	7.1		
		Filter 026 (Bright Red)	19	21	7.5	8.2		
		Filter 036 (Medium Pink)	22	24	8.6	9.4		
		Filter 049 (Medium Purple)	25	27	9.8	10.6		
		Filter 058 (Lavender)	28	30	11.0	11.8		
		Filter 068 (Sky Blue)	31	33	12.2	12.9		
		Filter 088 (Lime Green)	34	36	13.3	14.1		

Main Module: basic control (continued)

16 ctd.	Color wheel (continued)	Filter 089 (Moss Green)	37	39	14.5	15.3	0	Snap
		Filter 090 (Dark Yellow Green)	40	42	15.7	16.5		
		Filter 102 (Light Amber)	43	45	16.9	17.6		
		Filter 103 (Straw)	46	48	18.0	18.8		
		Filter 106 (Primary Red)	49	51	19.2	20.0		
		Filter 111 (Dark Pink)	52	54	20.4	21.2		
		Filter 115 (Peacock Blue)	55	57	21.6	22.4		
		Filter 117 (Steel Blue)	58	60	22.7	23.5		
		Filter 118 (Light Blue)	61	63	23.9	24.7		
		Filter 121 (Filter Green)	64	66	25.1	25.9		
		Filter 122 (Fern Green)	67	69	26.3	27.1		
		Filter 124 (Dark Green)	70	72	27.5	28.2		
		Filter 126 (Mauve)	73	75	28.6	29.4		
		Filter 128 (Bright Pink)	76	78	29.8	30.6		
		Filter 131 (Marine Blue)	79	81	31.0	31.8		
		Filter 132 (Medium Blue)	82	84	32.2	32.9		
		Filter 134 (Golden Amber)	85	87	33.3	34.1		
		Filter 135 (Deep Golden Amber)	88	90	34.5	35.3		
		Filter 136 (Pale Lavender)	91	93	35.7	36.5		
		Filter 137 (Special Lavender)	94	96	36.9	37.6		
		Filter 138 (Pale Green)	97	99	38.0	38.8		
		Filter 140 (Summer Blue)	100	102	39.2	40.0		
		Filter 141 (Bright Blue)	103	105	40.4	41.2		
		Filter 143 (Pale Navy Blue)	106	108	41.6	42.4		
		Filter 147 (Apricot)	109	111	42.7	43.5		
		Filter 148 (Bright Rose)	112	114	43.9	44.7		
		Filter 152 (Pale Gold)	115	117	45.1	45.9		
		Filter 154 (Pale Rose)	118	120	46.3	47.1		
		Filter 157 (Pink)	121	123	47.5	48.2		
		Filter 162 (Bastard Amber)	124	126	48.6	49.4		
		Filter 164 (Flame Red)	127	129	49.8	50.6		
		Filter 165 (Daylight Blue)	130	132	51.0	51.8		
		Filter 169 (Lilac Tint)	133	135	52.2	52.9		
		Filter 170 (Deep Lavender)	136	138	53.3	54.1		
		Filter 172 (Lagoon Blue)	139	141	54.5	55.3		
		Filter 180 (Dark Lavender)	142	144	55.7	56.5		
		Filter 182 (Light Red)	145	147	56.9	57.6		
		Filter 194 (Surprise Pink)	148	150	58.0	58.8		
		Filter 197 (Alice Blue)	151	153	59.2	60.0		
		Filter 201 (Full C.T. Blue)	154	156	60.4	61.2		
		Filter 202 (Half C.T. Blue)	157	159	61.6	62.4		
		Filter 203 (Quarter C.T. Blue)	160	162	62.7	63.5		
		Filter 204 (Full C.T. Orange)	163	165	63.9	64.7		
		Filter 206 (Quarter C.T. Orange)	166	168	65.1	65.9		
		Filter 219 (Fluorescent Green)	169	171	66.3	67.1		
		Filter 247 (Filter Minus Green)	172	174	67.5	68.2		
		Filter 248 (Half Minus Green)	175	177	68.6	69.4		
		Filter 281 (Three Quarter C.T. Blue)	178	180	69.8	70.6		
		Filter 285 (Three Qtr. C.T. Orange)	181	183	71.0	71.8		
		Filter 352 (Glacier Blue)	184	186	72.2	72.9		
		Filter 353 (Lighter Blue)	187	189	73.3	74.1		
		Filter 507 (Madge)	190	192	74.5	75.3		
		Filter 778 (Millennium Gold)	193	195	75.7	76.5		
		Filter 793 (Vanity Fair)	196	198	76.9	77.6		
		Filter 798 (Chrysalis Pink)	199	201	78.0	78.8		

Main Module: basic control (continued)

16 ctd.	Color wheel (continued)	HSI scroll, stop at first color	202	204	79.2	80.0	0	Snap
		HSI scroll slow → fast	205	252	80.4	98.8		Fade
		HSI scroll, stop at current color	253	255	99.2	100		Snap
17	Color Temperature Control	Open	0	9	0	3.5	0	Snap
		Fade through color temperatures of 10 000 K to 2500 K stepless (interpolation)	10	255	4.3	100		Fade
18	CQC (Color Quality Control) / Saturation	HQ (high quality), saturated color	0	9	0	3.5	0	Snap
		Crossfade, saturated to unsaturated color	10	117	3.9	45.9		Fade
		HQ (high quality), unsaturated color	118	127	46.3	49.8		Snap
		HO (high output), unsaturated color	128	137	50.2	53.7		Fade
		Crossfade, unsaturated to saturated color	138	245	54.1	96.1		Fade
		HO (high output), saturated color	246	255	96.5	100		Snap
19	M/G shift	Off (no correction)	0	9	0	3.5	0	Snap
		Full plus magenta +100%	10	10	3.9	3.9		Fade
		Plus magenta +99% → +1%	11	124	4.3	48.6		Snap
		Neutral / no correction	125	140	49.0	54.9		Fade
		Plus green +1% → +99%	141	254	55.3	99.6		Snap
		Full plus green +100%	255	255	100	100		Snap
20	Tungsten effect	Off	0	9	0	3.5	0	Snap
		Tungsten ACL 250W/28V	10	19	3.9	7.5		
		Tungsten Blinder 650W/120V	20	29	7.8	11.4		
		Tungsten 750W/80V	30	39	11.8	15.3		
		Tungsten 1000W/240V	40	49	15.7	19.2		
		Tungsten 1200W/240V	50	59	19.6	23.1		
		Tungsten 2000W/230V	60	69	23.5	27.1		
		Tungsten 2500W/230V	70	79	27.5	31.0		
		Tungsten 5000W/230V	80	89	31.4	34.9		
		No function (off)	90	120	35.3	47.1		
		Off	120	139	47.1	54.5		
		FX Tungsten ACL 250W/28V	140	149	54.9	58.4		
		FX Tungsten Blinder 650W/120V	150	159	58.8	62.4		
		FX Tungsten 750W/80V	160	169	62.7	66.3		
		FX Tungsten 1000W/240V	170	179	66.7	70.2		
		FX Tungsten 1200W/240V	180	189	70.6	74.1		
		FX Tungsten 2000W/230V	190	199	74.5	78.0		
		FX Tungsten 2500W/230V	200	209	78.4	82.0		
		FX Tungsten 5000W/230V	210	219	82.4	85.9		
		No function (off)	220	255	86.3	100		

Main Module: basic control (continued)

21	Mix priority	Main Module and Sub Module HTP (highest value takes priority)	0	9	0	3.5	0	Snap
		Main only (Main Module color takes priority)	10	19	3.9	7.5		
		Sub only (Sub Module color takes priority)	20	29	7.8	11.4		
		Main and Sub additive (Sub Module color value added to Main Module color value)	30	39	11.8	15.3		
		Main minus Sub Module subtractive (Sub Module color value subtracted from Main)	40	49	15.7	19.2		
		Sub Module minus main subtractive (Main Module color value subtracted from Sub Module)	50	59	19.6	23.1		Snap
		TrueColor 1: Main over Sub – snap	60	69	23.5	27.1		
		TrueColor 2: Sub over Main – snap	70	79	27.5	31.0		Fade
		TrueColor 3: Main over Sub – crossfade	80	89	31.4	34.9		
		TrueColor 4: Sub over Main – crossfade	90	99	35.3	38.8		
		No function	100	127	39.2	49.8		Snap
		Main Module only	128	130	50.2	51.0		
		Crossfading Main → HTP	131	190	51.4	74.5		Fade
		Main and Sub Modules (HTP)	191	192	74.9	75.3		Snap
		Crossfading HTP → Sub	193	252	75.7	98.8		Fade
		Sub Module only	253	255	99.2	100		Snap

Sub Module: second layer control

22	Intensity coarse	Intensity 0 → 100%	0	65535	0	100	0	Fade
23	Intensity fine							
24	Shutter	Closed	0	4	0	1.6	0	Snap
		Single flash if value changed within the range 005 → 009	5	9	2.0	3.5		Fade
		Pulse slow → fast	10	39	3.9	15.3		Fade
		Pulse opening slow → fast	40	69	15.7	27.1		
		Pulse closing slow → fast	70	99	27.5	38.8		
		Double flash slow → fast	100	129	39.2	50.6		
		Strobe random pixel slow → fast	130	159	51.0	62.4		
		Strobe random all slow → fast	160	199	62.7	78.0		
		Strobe sync all pixel slow → fast	200	250	78.4	98.0		
		Open	251	255	98.4	100		Snap
25	Pattern selection	Off (all pixels active)	0	9	0	3.5	0	Snap
		Static Pattern 01	10	11	3.9	4.3		
		Static Pattern 02	12	13	4.7	5.1		
		Static Pattern 03	14	15	5.5	5.9		
		Static Pattern 04	16	17	6.3	6.7		
		Static Pattern 05	18	19	7.1	7.5		
		Static Pattern 06	20	21	7.8	8.2		
		Static Pattern 07	22	23	8.6	9.0		
		Static Pattern 08	24	25	9.4	9.8		
		Static Pattern 09	26	27	10.2	10.6		
		Static Pattern 10	28	29	11.0	11.4		
		Static Pattern 11	30	31	11.8	12.2		
		Static Pattern 12	32	33	12.5	12.9		
		Static Pattern 13	34	35	13.3	13.7		

Sub Module: second layer control (continued)

25 ctd.	Pattern selection (continued)	Static Pattern 14	36	37	14.1	14.5	0	Snap
		Static Pattern 15	38	39	14.9	15.3		
		Static Pattern 16	40	41	15.7	16.1		
		Static Pattern 17	52	43	20.4	16.9		
		Static Pattern 18	44	45	17.3	17.6		
		Static Pattern 19	46	47	18.0	18.4		
		Static Pattern 20	48	49	18.8	19.2		
		Static Pattern 21	50	51	19.6	20.0		
		Static Pattern 22	52	53	20.4	20.8		
		Static Pattern 23	54	55	21.2	21.6		
		Static Pattern 24	56	57	22.0	22.4		
		Static Pattern 25	58	59	22.7	23.1		
		Static Pattern 26	60	61	23.5	23.9		
		Static Pattern 27	62	63	24.3	24.7		
		Static Pattern 28	64	65	25.1	25.5		
		Static Pattern 29	66	67	25.9	26.3		
		Static Pattern 30	68	69	26.7	27.1		
		Static Pattern 31	70	71	27.5	27.8		
		Static Pattern 32	72	73	28.2	28.6		
		Static Pattern 33	74	75	29.0	29.4		
		Static Pattern 34	76	77	29.8	30.2		
		Static Pattern 35	78	79	30.6	31.0		
		Static Pattern 36	80	81	31.4	31.8		
		Static Pattern 37	82	83	32.2	32.5		
		Static Pattern 38	84	85	32.9	33.3		
		Static Pattern 39	86	87	33.7	34.1		
		Static Pattern 40	88	89	34.5	34.9		
		Static Pattern 41	90	91	35.3	35.7		
		Static Pattern 42	92	93	36.1	36.5		
		Static Pattern 43	94	95	36.9	37.3		
		Static Pattern 44	96	97	37.6	38.0		
		Static Pattern 45	98	99	38.4	38.8		
		Static Pattern 46	100	101	39.2	39.6		
		Static Pattern 47	102	103	40.0	40.4		
		Static Pattern 48	104	105	40.8	41.2		
		Static Pattern 49	106	107	41.6	42.0		
		Static Pattern 50	108	109	42.4	42.7		
		Static Pattern 51	110	111	43.1	43.5		
		Static Pattern 52	112	113	43.9	44.3		
		Static Pattern 53	114	115	44.7	45.1		
		Static Pattern 54	116	117	45.5	45.9		
		Static Pattern 55	118	119	46.3	46.7		
		Static Pattern 56	120	121	47.1	47.5		
		Static Pattern 57	122	123	47.8	48.2		
		Static Pattern 58	124	125	48.6	49.0		
		Static Pattern 59	126	127	49.4	49.8		
		Dynamic Pattern 01	128	129	50.2	50.6		
		Dynamic Pattern 02	130	131	51.0	51.4		
		Dynamic Pattern 03	132	133	51.8	52.2		
		Dynamic Pattern 04	134	135	52.5	52.9		
		Dynamic Pattern 05	136	137	53.3	53.7		
		Dynamic Pattern 06	138	139	54.1	54.5		
		Dynamic Pattern 07	140	141	54.9	55.3		
		Dynamic Pattern 08	142	143	55.7	56.1		
		Dynamic Pattern 09	144	145	56.5	56.9		
		Dynamic Pattern 10	146	147	57.3	57.6		

Sub Module: second layer control (continued)

25 Ctd.	Pattern selection (continued)	Dynamic Pattern 11	148	149	58.0	58.4	0	Snap
		Dynamic Pattern 12	150	151	58.8	59.2		
		Dynamic Pattern 13	152	153	59.6	60.0		
		Dynamic Pattern 14	154	155	60.4	60.8		
		Dynamic Pattern 15	156	157	61.2	61.6		
		Dynamic Pattern 16	158	159	62.0	62.4		
		Dynamic Pattern 17	160	161	62.7	63.1		
		Dynamic Pattern 18	162	163	63.5	63.9		
		Dynamic Pattern 19	164	165	64.3	64.7		
		Dynamic Pattern 20	166	167	65.1	65.5		
		Dynamic Pattern 21	168	169	65.9	66.3		
		Dynamic Pattern 22	170	171	66.7	67.1		
		Dynamic Pattern 23	172	173	67.5	67.8		
		Dynamic Pattern 24	174	175	68.2	68.6		
		Dynamic Pattern 25	176	177	69.0	69.4		
		Dynamic Pattern 26	178	179	69.8	70.2		
		Dynamic Pattern 27	180	181	70.6	71.0		
		Dynamic Pattern 28	182	183	71.4	71.8		
		Dynamic Pattern 29	184	185	72.2	72.5		
		Dynamic Pattern 30	186	187	72.9	73.3		
		Dynamic Pattern 31	188	189	73.7	74.1		
		Dynamic Pattern 32	190	191	74.5	74.9		
		Dynamic Pattern 33	192	193	75.3	75.7		
		Dynamic Pattern 34	194	195	76.1	76.5		
		Dynamic Pattern 35	196	197	76.9	77.3		
		Dynamic Pattern 36	198	199	77.6	78.0		
		Dynamic Pattern 37	200	201	78.4	78.8		
		Dynamic Pattern 38	202	203	79.2	79.6		
		Dynamic Pattern 39	204	205	80.0	80.4		
		Dynamic Pattern 40	206	207	80.8	81.2		
		Dynamic Pattern 41	208	209	81.6	82.0		
		Dynamic Pattern 42	210	211	82.4	82.7		
		Dynamic Pattern 43	212	213	83.1	83.5		
		Dynamic Pattern 44	214	215	83.9	84.3		
		Dynamic Pattern 45	216	217	84.7	85.1		
		Dynamic Pattern 46	218	219	85.5	85.9		
		Dynamic Pattern 47	220	221	86.3	86.7		
		Dynamic Pattern 48	222	223	87.1	87.5		
		Dynamic Pattern 49	224	225	87.8	88.2		
		Dynamic Pattern 50	226	227	88.6	89.0		
		Special Pattern 01	228	229	89.4	89.8		
		Special Pattern 02	230	231	90.2	90.6		
		Special Pattern 03	232	233	91.0	91.4		
		Special Pattern 04	234	235	91.8	92.2		
		Special Pattern 05	236	237	92.5	92.9		
		Special Pattern 06	238	239	93.3	93.7		
		Special Pattern 07	240	241	94.1	94.5		
		Special Pattern 08	242	243	94.9	95.3		
		Special Pattern 09	244	245	95.7	96.1		
		Special Pattern 10	246	247	96.5	96.9		
		Special Pattern 11	248	249	97.3	97.6		
		Random Pixel	250	255	98.0	100		

Sub Module: second layer control (continued)

26	Pattern step / speed	Stop (first pattern step)	0	2	0.0	0.8	0	Snap
		CW fast → slow (run pattern step 1 → n)	3	63	1.2	24.7		
		Stop at current position	64	66	25.1	25.9		
		CCW slow → fast (run pattern step n → 1)	67	127	26.3	49.8		
		Pattern Step 01	128	129	50.2	50.6		
		Pattern Step 02	130	131	51.0	51.4		
		Pattern Step 03	132	133	51.8	52.2		
		Pattern Step 04	134	135	52.5	52.9		
		Pattern Step 05	136	137	53.3	53.7		
		Pattern Step 06	138	139	54.1	54.5		
		Pattern Step 07	140	141	54.9	55.3		
		Pattern Step 08	142	143	55.7	56.1		
		Pattern Step 09	144	145	56.5	56.9		
		Pattern Step 10	146	147	57.3	57.6		
		Pattern Step 11	148	149	58.0	58.4		
		Pattern Step 12	150	151	58.8	59.2		
		Pattern Step 13	152	153	59.6	60.0		
		Pattern Step 14	154	155	60.4	60.8		
		Pattern Step 15	156	157	61.2	61.6		
		Pattern Step 16	158	159	62.0	62.4		
		Pattern Step 17	160	161	62.7	63.1		
		Pattern Step 18	162	163	63.5	63.9		
		Pattern Step 19	164	165	64.3	64.7		
		Pattern Step 20	166	167	65.1	65.5		
		Pattern Step 21	168	169	65.9	66.3		
		Pattern Step 22	170	171	66.7	67.1		
		Pattern Step 23	172	173	67.5	67.8		
		Pattern Step 24	174	175	68.2	68.6		
		Pattern Step 25	176	177	69.0	69.4		
		Pattern Step 26	178	179	69.8	70.2		
		Pattern Step 27	180	181	70.6	71.0		
		Pattern Step 28	182	183	71.4	71.8		
		Pattern Step 29	184	185	72.2	72.5		
		Pattern Step 30	186	187	72.9	73.3		
		Pattern Step 31	188	189	73.7	74.1		
		Pattern Step 32	190	191	74.5	74.9		
		Pattern Step 33	192	193	75.3	75.7		
		Pattern Step 34	194	195	76.1	76.5		
		Pattern Step 35	196	197	76.9	77.3		
		Pattern Step 36	198	199	77.6	78.0		
		Pattern Step 37	200	201	78.4	78.8		
		Pattern Step 41	208	209	81.6	82.0		
		Pattern Step 42	210	211	82.4	82.7		
		Pattern Step 43	212	213	83.1	83.5		
		Pattern Step 41	208	209	81.6	82.0		
		Pattern Step 42	210	211	82.4	82.7		
		Pattern Step 43	212	213	83.1	83.5		
		Pattern Step 44	214	215	83.9	84.3		
		Pattern Step 45	216	217	84.7	85.1		
		Pattern Step 46	218	219	85.5	85.9		
		Pattern Step 47	220	221	86.3	86.7		
		Pattern Step 48	222	223	87.1	87.5		
		Pattern Step 49	224	225	87.8	88.2		
		Pattern Step 50	226	227	88.6	89.0		

Sub Module: second layer control (continued)

26 ctd.	Pattern step / speed continued	Pattern Step 51	228	229	89.4	89.8	0	Snap
		Pattern Step 52	230	231	90.2	90.6		
		Pattern Step 53	232	233	91.0	91.4		
		Pattern Step 54	234	235	91.8	92.2		
		Pattern Step 55	236	237	92.5	92.9		
		Pattern Step 56	238	239	93.3	93.7		
		Pattern Step 57	240	241	94.1	94.5		
		Pattern Step 58	242	243	94.9	95.3		
		Pattern Step 59	244	245	95.7	96.1		
		Pattern Step 60	246	247	96.5	96.9		
		Pattern Step 61	248	249	97.3	97.6		
		Pattern Step 62	250	251	98.0	98.4		
		Pattern Step 63	252	253	98.8	99.2		
		Pattern Step 64	254	255	99.6	100.0		
27	Pattern step crossfading (from one step to next)	Off (no crossfading, Snap)	0	9	0	3.5	0	Snap
		Crossfading: Snap → min. Xfade → max. Xfade (fade in and fade out times are identical)	10	127	3.9	49.8		Fade
		Off (no crossfading, Snap)	128	137	50.2	53.7		Snap
		Crossfading with tail: Snap → min. Xfade with tail → max. Xfade with tail (fade in time is shorter than fade out time)	138	255	54.1	100		Fade
28	Pattern transition (from one pattern to next)	Off (snap from one pattern to next)	0	9	0	3.5	0	Snap
		Normal transition (snap → fade 5s)	10	63	3.9	24.7		Fade
		Off (snap from one pattern to next)	64	73	25.1	28.6		Snap
		FOB (Fade Over Blackout) transition (snap → fade 5s)	74	127	29.0	49.8		Fade
		Off (snap from one pattern to next)	128	137	50.2	53.7		Snap
		FOF (Fade Over Full) transition (snap → fade 5s)	138	191	54.1	74.9		Fade
		No function	192	255	75.3	100.0		
29	Fixture total number	Off	0	0	0	0	0	Snap
		1 fixture in total	1	1	0.4	0.4		
		2 fixtures in total	2	2	0.8	0.8		
		3...254 fixtures in total	3	254	1.2	99.6		
		255 fixtures in total	255	255	100	100		
30	Fixture position	Off	0	0	0	0	0	Snap
		Fixture in position 1	1	1	0.4	0.4		
		Fixture in position 2	2	2	0.8	0.8		
		Fixture in position 3 ... 254	3	254	1.2	99.6		
		Fixture in position 255	255	255	100	100		
31	Red, pixel 01	Intensity 0 → 100%	0	255	0	100	0	Fade
32	Green, pixel 01	Intensity 0 → 100%	0	255	0	100	0	Fade
33	Blue, pixel 01	Intensity 0 → 100%	0	255	0	100	0	Fade
34	Red, pixel 02	Intensity 0 → 100%	0	255	0	100	0	Fade
35	Green, pixel 02	Intensity 0 → 100%	0	255	0	100	0	Fade
36	Blue, pixel 02	Intensity 0 → 100%	0	255	0	100	0	Fade
37	Red, pixel 03	Intensity 0 → 100%	0	255	0	100	0	Fade
38	Green, pixel 03	Intensity 0 → 100%	0	255	0	100	0	Fade
39	Blue, pixel 03	Intensity 0 → 100%	0	255	0	100	0	Fade
40	Red, pixel 04	Intensity 0 → 100%	0	255	0	100	0	Fade

Sub Module: second layer control (continued)

41	Green, pixel 04	Intensity 0 → 100%	0	255	0	100	0	Fade
42	Blue, pixel 04	Intensity 0 → 100%	0	255	0	100	0	Fade
43	Red, pixel 05	Intensity 0 → 100%	0	255	0	100	0	Fade
44	Green, pixel 05	Intensity 0 → 100%	0	255	0	100	0	Fade
45	Blue, pixel 05	Intensity 0 → 100%	0	255	0	100	0	Fade
46	Red, pixel 06	Intensity 0 → 100%	0	255	0	100	0	Fade
47	Green, pixel 06	Intensity 0 → 100%	0	255	0	100	0	Fade
48	Blue, pixel 06	Intensity 0 → 100%	0	255	0	100	0	Fade
49	Red, pixel 07	Intensity 0 → 100%	0	255	0	100	0	Fade
50	Green, pixel 07	Intensity 0 → 100%	0	255	0	100	0	Fade
51	Blue, pixel 07	Intensity 0 → 100%	0	255	0	100	0	Fade
52	Red, pixel 08	Intensity 0 → 100%	0	255	0	100	0	Fade
53	Green, pixel 08	Intensity 0 → 100%	0	255	0	100	0	Fade
54	Blue, pixel 08	Intensity 0 → 100%	0	255	0	100	0	Fade
55	Red, pixel 09	Intensity 0 → 100%	0	255	0	100	0	Fade
56	Green, pixel 09	Intensity 0 → 100%	0	255	0	100	0	Fade
57	Blue, pixel 09	Intensity 0 → 100%	0	255	0	100	0	Fade
58	Red, pixel 10	Intensity 0 → 100%	0	255	0	100	0	Fade
59	Green, pixel 10	Intensity 0 → 100%	0	255	0	100	0	Fade
60	Blue, pixel 10	Intensity 0 → 100%	0	255	0	100	0	Fade
61	Red, pixel 11	Intensity 0 → 100%	0	255	0	100	0	Fade
62	Green, pixel 11	Intensity 0 → 100%	0	255	0	100	0	Fade
63	Blue, pixel 11	Intensity 0 → 100%	0	255	0	100	0	Fade
64	Red, pixel 12	Intensity 0 → 100%	0	255	0	100	0	Fade
65	Green, pixel 12	Intensity 0 → 100%	0	255	0	100	0	Fade
66	Blue, pixel 12	Intensity 0 → 100%	0	255	0	100	0	Fade
67	Red, pixel 13	Intensity 0 → 100%	0	255	0	100	0	Fade
68	Green, pixel 13	Intensity 0 → 100%	0	255	0	100	0	Fade
69	Blue, pixel 13	Intensity 0 → 100%	0	255	0	100	0	Fade
70	Red, pixel 14	Intensity 0 → 100%	0	255	0	100	0	Fade
71	Green, pixel 14	Intensity 0 → 100%	0	255	0	100	0	Fade
72	Blue, pixel 14	Intensity 0 → 100%	0	255	0	100	0	Fade
73	Red, pixel 15	Intensity 0 → 100%	0	255	0	100	0	Fade
74	Green, pixel 15	Intensity 0 → 100%	0	255	0	100	0	Fade
75	Blue, pixel 15	Intensity 0 → 100%	0	255	0	100	0	Fade
76	Red, pixel 16	Intensity 0 → 100%	0	255	0	100	0	Fade
77	Green, pixel 16	Intensity 0 → 100%	0	255	0	100	0	Fade
78	Blue, pixel 16	Intensity 0 → 100%	0	255	0	100	0	Fade
79	Red, pixel 17	Intensity 0 → 100%	0	255	0	100	0	Fade
80	Green, pixel 17	Intensity 0 → 100%	0	255	0	100	0	Fade
81	Blue, pixel 17	Intensity 0 → 100%	0	255	0	100	0	Fade
82	Red, pixel 18	Intensity 0 → 100%	0	255	0	100	0	Fade
83	Green, pixel 18	Intensity 0 → 100%	0	255	0	100	0	Fade
84	Blue, pixel 18	Intensity 0 → 100%	0	255	0	100	0	Fade

DMX Mode 5: MultiPix Compressed RGB

63 DMX Channels

Channel	Command		DMX range		Percent		Default DMX	Fade
Main module: basic control								
1	Tilt coarse	Tilt back → front	0	65535	0	100	32768	Fade
2	Tilt fine							
3	Intensity coarse	Intensity 0 → 100%	0	65535	0	100	32768	Fade
4	Intensity fine							
5	Shutter	Closed	0	4	0	1.6	255	Snap
		Single flash each time value is changed within range 005 → 009	5	9	2.0	3.5		Snap
		Pulse slow → fast	10	39	3.9	15.3		Fade
		Opening pulse slow → fast	40	69	15.7	27.1		Fade
		Closing pulse slow → fast	70	99	27.5	38.8		Fade
		Double flash slow → fast	100	129	39.2	50.6		Fade
		Random pixel strobe slow → fast	130	159	51.0	62.4		Fade
		Random all strobe slow → fast	160	199	62.7	78.0		Fade
		Strobe sync all pixels slow → fast	200	250	78.4	98.0		Fade
		Open	251	255	98.4	100		Snap
6	Zoom	Zoom narrow → wide	0	255	0	100	0	Fade
7	Control/Settings	See 'Control / Settings channel' on page 79						
8	Color Temperature Control	Open	0	9	0	3.5	0	Snap
		Fade through color temperatures of 10 000 K to 2 500 K stepless (interpolation)	10	255	4.3	100		Fade
9	CQC (Color Quality Control) / Saturation	HQ (high quality), saturated color	0	9	0	3.5	0	Snap
		Crossfade, saturated to unsaturated color	10	117	3.9	45.9		Fade
		HQ (high quality), unsaturated color	118	127	46.3	49.8		Snap
		HO (high output), unsaturated color	128	137	50.2	53.7		
		Crossfade, unsaturated to saturated color	138	245	54.1	96.1		Fade
		HO (high output), saturated color	246	255	96.5	100		Snap
10	Red, pixel 01	Intensity 0 → 100%	0	255	0	100	0	Fade
11	Green, pixel 01	Intensity 0 → 100%	0	255	0	100	0	Fade
12	Blue, pixel 01	Intensity 0 → 100%	0	255	0	100	0	Fade
13	Red, pixel 02	Intensity 0 → 100%	0	255	0	100	0	Fade
14	Green, pixel 02	Intensity 0 → 100%	0	255	0	100	0	Fade
15	Blue, pixel 02	Intensity 0 → 100%	0	255	0	100	0	Fade
16	Red, pixel 03	Intensity 0 → 100%	0	255	0	100	0	Fade
17	Green, pixel 03	Intensity 0 → 100%	0	255	0	100	0	Fade
18	Blue, pixel 03	Intensity 0 → 100%	0	255	0	100	0	Fade
19	Red, pixel 04	Intensity 0 → 100%	0	255	0	100	0	Fade
20	Green, pixel 04	Intensity 0 → 100%	0	255	0	100	0	Fade
21	Blue, pixel 04	Intensity 0 → 100%	0	255	0	100	0	Fade
22	Red, pixel 05	Intensity 0 → 100%	0	255	0	100	0	Fade
23	Green, pixel 05	Intensity 0 → 100%	0	255	0	100	0	Fade
24	Blue, pixel 05	Intensity 0 → 100%	0	255	0	100	0	Fade
25	Red, pixel 06	Intensity 0 → 100%	0	255	0	100	0	Fade
26	Green, pixel 06	Intensity 0 → 100%	0	255	0	100	0	Fade
27	Blue, pixel 06	Intensity 0 → 100%	0	255	0	100	0	Fade

Main module: basic control (continued)

28	Red, pixel 07	Intensity 0 → 100%	0	255	0	100	0	Fade
29	Green, pixel 07	Intensity 0 → 100%	0	255	0	100	0	Fade
30	Blue, pixel 07	Intensity 0 → 100%	0	255	0	100	0	Fade
31	Red, pixel 08	Intensity 0 → 100%	0	255	0	100	0	Fade
32	Green, pixel 08	Intensity 0 → 100%	0	255	0	100	0	Fade
33	Blue, pixel 08	Intensity 0 → 100%	0	255	0	100	0	Fade
34	Red, pixel 09	Intensity 0 → 100%	0	255	0	100	0	Fade
35	Green, pixel 09	Intensity 0 → 100%	0	255	0	100	0	Fade
36	Blue, pixel 09	Intensity 0 → 100%	0	255	0	100	0	Fade
37	Red, pixel 10	Intensity 0 → 100%	0	255	0	100	0	Fade
38	Green, pixel 10	Intensity 0 → 100%	0	255	0	100	0	Fade
39	Blue, pixel 10	Intensity 0 → 100%	0	255	0	100	0	Fade
40	Red, pixel 11	Intensity 0 → 100%	0	255	0	100	0	Fade
41	Green, pixel 11	Intensity 0 → 100%	0	255	0	100	0	Fade
42	Blue, pixel 11	Intensity 0 → 100%	0	255	0	100	0	Fade
43	Red, pixel 12	Intensity 0 → 100%	0	255	0	100	0	Fade
44	Green, pixel 12	Intensity 0 → 100%	0	255	0	100	0	Fade
45	Blue, pixel 12	Intensity 0 → 100%	0	255	0	100	0	Fade
46	Red, pixel 13	Intensity 0 → 100%	0	255	0	100	0	Fade
47	Green, pixel 13	Intensity 0 → 100%	0	255	0	100	0	Fade
48	Blue, pixel 13	Intensity 0 → 100%	0	255	0	100	0	Fade
49	Red, pixel 14	Intensity 0 → 100%	0	255	0	100	0	Fade
50	Green, pixel 14	Intensity 0 → 100%	0	255	0	100	0	Fade
51	Blue, pixel 14	Intensity 0 → 100%	0	255	0	100	0	Fade
52	Red, pixel 15	Intensity 0 → 100%	0	255	0	100	0	Fade
53	Green, pixel 15	Intensity 0 → 100%	0	255	0	100	0	Fade
54	Blue, pixel 15	Intensity 0 → 100%	0	255	0	100	0	Fade
55	Red, pixel 16	Intensity 0 → 100%	0	255	0	100	0	Fade
56	Green, pixel 16	Intensity 0 → 100%	0	255	0	100	0	Fade
57	Blue, pixel 16	Intensity 0 → 100%	0	255	0	100	0	Fade
58	Red, pixel 17	Intensity 0 → 100%	0	255	0	100	0	Fade
59	Green, pixel 17	Intensity 0 → 100%	0	255	0	100	0	Fade
60	Blue, pixel 17	Intensity 0 → 100%	0	255	0	100	0	Fade
61	Red, pixel 18	Intensity 0 → 100%	0	255	0	100	0	Fade
62	Green, pixel 18	Intensity 0 → 100%	0	255	0	100	0	Fade
63	Blue, pixel 18	Intensity 0 → 100%	0	255	0	100	0	Fade

DMX Mode 6: MultiPix Compressed RGBL

81 DMX Channels

Channel	Command		DMX range		Percent		Default DMX	Fade
Main module: basic control								
1	Tilt coarse	Tilt back → front	0	65535	0	100	32768	Fade
2	Tilt fine							
3	Intensity coarse	Intensity 0 → 100%	0	65535	0	100	32768	Fade
4	Intensity fine							
5	Shutter	Closed	0	4	0	1.6	255	Snap
		Single flash each time value is changed within range 005 → 009	5	9	2.0	3.5		Snap
		Pulse slow → fast	10	39	3.9	15.3		Fade
		Opening pulse slow → fast	40	69	15.7	27.1		Fade
		Closing pulse slow → fast	70	99	27.5	38.8		Fade
		Double flash slow → fast	100	129	39.2	50.6		Fade
		Random pixel strobe slow → fast	130	159	51.0	62.4		Fade
		Random all strobe slow → fast	160	199	62.7	78.0		Fade
		Strobe sync all pixels slow → fast	200	250	78.4	98.0		Fade
		Open	251	255	98.4	100		Snap
6	Zoom	Zoom narrow → wide	0	255	0	100	0	Fade
7	Control/Settings	See 'Control / Settings channel' on page 79						
8	Color Temperature Control	Open	0	9	0	3.5	0	Snap
		Fade through color temperatures of 10 000 K to 2 500 K stepless (interpolation)	10	255	4.3	100		Fade
9	CQC (Color Quality Control) / Saturation	HQ (high quality), saturated color	0	9	0	3.5	0	Snap
		Crossfade, saturated to unsaturated color	10	117	3.9	45.9		Fade
		HQ (high quality), unsaturated color	118	127	46.3	49.8		Snap
		HO (high output), unsaturated color	128	137	50.2	53.7		
		Crossfade, unsaturated to saturated color	138	245	54.1	96.1		Fade
		HO (high output), saturated color	246	255	96.5	100		Snap
10	Red, pixel 01	Intensity 0 → 100%	0	255	0	100	0	Fade
11	Green, pixel 01	Intensity 0 → 100%	0	255	0	100		
12	Blue, pixel 01	Intensity 0 → 100%	0	255	0	100		
13	Lime, pixel 01	Intensity 0 → 100%	0	255	0	100		
14	Red, pixel 02	Intensity 0 → 100%	0	255	0	100		
15	Green, pixel 02	Intensity 0 → 100%	0	255	0	100		
16	Blue, pixel 02	Intensity 0 → 100%	0	255	0	100		
17	Lime, pixel 02	Intensity 0 → 100%	0	255	0	100		
18	Red, pixel 03	Intensity 0 → 100%	0	255	0	100		
19	Green, pixel 03	Intensity 0 → 100%	0	255	0	100		
20	Blue, pixel 03	Intensity 0 → 100%	0	255	0	100		
21	Lime, pixel 03	Intensity 0 → 100%	0	255	0	100		
22	Red, pixel 04	Intensity 0 → 100%	0	255	0	100		
23	Green, pixel 04	Intensity 0 → 100%	0	255	0	100		
24	Blue, pixel 04	Intensity 0 → 100%	0	255	0	100		
25	Lime, pixel 04	Intensity 0 → 100%	0	255	0	100		
26	Red, pixel 05	Intensity 0 → 100%	0	255	0	100		
27	Green, pixel 05	Intensity 0 → 100%	0	255	0	100		
28	Blue, pixel 05	Intensity 0 → 100%	0	255	0	100		
29	Lime, pixel 05	Intensity 0 → 100%	0	255	0	100		

Main module: basic control (continued)

30	Red, pixel 06	Intensity 0 → 100%	0	255	0	100	0	Fade
31	Green, pixel 06	Intensity 0 → 100%	0	255	0	100		
32	Blue, pixel 06	Intensity 0 → 100%	0	255	0	100		
33	Lime, pixel 06	Intensity 0 → 100%	0	255	0	100		
34	Red, pixel 07	Intensity 0 → 100%	0	255	0	100		
35	Green, pixel 07	Intensity 0 → 100%	0	255	0	100		
36	Blue, pixel 07	Intensity 0 → 100%	0	255	0	100		
37	Lime, pixel 07	Intensity 0 → 100%	0	255	0	100		
38	Red, pixel 08	Intensity 0 → 100%	0	255	0	100		
39	Green, pixel 08	Intensity 0 → 100%	0	255	0	100		
40	Blue, pixel 08	Intensity 0 → 100%	0	255	0	100		
41	Lime, pixel 08	Intensity 0 → 100%	0	255	0	100		
42	Red, pixel 09	Intensity 0 → 100%	0	255	0	100		
43	Green, pixel 09	Intensity 0 → 100%	0	255	0	100		
44	Blue, pixel 09	Intensity 0 → 100%	0	255	0	100		
45	Lime, pixel 09	Intensity 0 → 100%	0	255	0	100		
46	Red, pixel 10	Intensity 0 → 100%	0	255	0	100		
47	Green, pixel 10	Intensity 0 → 100%	0	255	0	100		
48	Blue, pixel 10	Intensity 0 → 100%	0	255	0	100		
49	Lime, pixel 10	Intensity 0 → 100%	0	255	0	100		
50	Red, pixel 11	Intensity 0 → 100%	0	255	0	100		
51	Green, pixel 11	Intensity 0 → 100%	0	255	0	100		
52	Blue, pixel 11	Intensity 0 → 100%	0	255	0	100		
53	Lime, pixel 11	Intensity 0 → 100%	0	255	0	100		
54	Red, pixel 12	Intensity 0 → 100%	0	255	0	100		
55	Green, pixel 12	Intensity 0 → 100%	0	255	0	100		
56	Blue, pixel 12	Intensity 0 → 100%	0	255	0	100		
57	Lime, pixel 12	Intensity 0 → 100%	0	255	0	100		
58	Red, pixel 13	Intensity 0 → 100%	0	255	0	100		
59	Green, pixel 13	Intensity 0 → 100%	0	255	0	100		
60	Blue, pixel 13	Intensity 0 → 100%	0	255	0	100		
61	Lime, pixel 13	Intensity 0 → 100%	0	255	0	100		
62	Red, pixel 14	Intensity 0 → 100%	0	255	0	100		
63	Green, pixel 14	Intensity 0 → 100%	0	255	0	100		
64	Blue, pixel 14	Intensity 0 → 100%	0	255	0	100		
65	Lime, pixel 14	Intensity 0 → 100%	0	255	0	100		
66	Red, pixel 15	Intensity 0 → 100%	0	255	0	100		
67	Green, pixel 15	Intensity 0 → 100%	0	255	0	100		
68	Blue, pixel 15	Intensity 0 → 100%	0	255	0	100		
69	Lime, pixel 15	Intensity 0 → 100%	0	255	0	100		
70	Red, pixel 16	Intensity 0 → 100%	0	255	0	100		
71	Green, pixel 16	Intensity 0 → 100%	0	255	0	100		
72	Blue, pixel 16	Intensity 0 → 100%	0	255	0	100		
73	Lime, pixel 16	Intensity 0 → 100%	0	255	0	100		
74	Red, pixel 17	Intensity 0 → 100%	0	255	0	100		
75	Green, pixel 17	Intensity 0 → 100%	0	255	0	100		
76	Blue, pixel 17	Intensity 0 → 100%	0	255	0	100		
77	Lime, pixel 17	Intensity 0 → 100%	0	255	0	100		
78	Red, pixel 18	Intensity 0 → 100%	0	255	0	100		
79	Green, pixel 18	Intensity 0 → 100%	0	255	0	100		
80	Blue, pixel 18	Intensity 0 → 100%	0	255	0	100		
81	Lime, pixel 18	Intensity 0 → 100%	0	255	0	100		

Control / Settings channel

The Control / Settings commands listed below are available on Channel 7 in every DMX mode.

Channel	Command	DMX range		Percent		Default DMX	Fade
7	No function	0	11	0	4.3	0	Snap
	iQ.Service connect	12	13	4.7	5.1		
	No function	14	19	5.5	7.5		
	Dimmer curve: Soft (square) (3 sec.)	20	21	7.8	8.2		
	Dimmer curve: Linear (3 sec.)	22	23	8.6	9.0		
	Dimmer curve: S-Curve (3 sec.)	24	25	9.4	9.8		
	No function	26	29	10.2	11.4		
	Display mode: Off (3 sec.)	30	31	11.8	12.2		
	Display mode: Auto (3 sec.)	32	33	12.5	12.9		
	Display mode: On (3 sec.)	34	35	13.3	13.7		
	No function	36	37	14.1	14.5		
	Display orientation: Auto (3 sec.)	38	39	14.9	15.3		
	Display orientation: Normal (3 sec.)	40	41	15.7	16.1		
	Display orientation: Inverted (3 sec.)	42	43	16.5	16.9		
	No function	44	45	17.3	17.6		
	No DMX: Blackout (3 sec.)	46	47	18.0	18.4		
	No DMX: Hold (3 sec.)	48	49	18.8	19.2		
	No DMX: Captured scene (3 sec.)	50	51	19.6	20.0		
	Capture Scene (3 sec.)	52	53	20.4	20.8		
	No function	54	55	21.2	21.6		
	Fan mode: Minimum (3 sec.)	56	57	22.0	22.4		
	Fan mode: Regulated (3 sec.)	58	59	22.7	23.1		
	Fan mode: High (3 sec.)	60	61	23.5	23.9		
	Fan mode: Medium (3 sec.)	62	63	24.3	24.7		
	Fan mode: Low (3 sec.)	64	65	25.1	25.5		
	No function	66	69	25.9	27.1		
	Pixel mirror: Off (3 sec.)	70	71	27.5	27.8		
	Pixel mirror: y-mirror (3 sec.)	72	73	28.2	28.6		
	No function	74	91	29.0	35.7		
	Position feedback: Off (3 sec.)	92	93	36.1	36.5		
	Position feedback: On (3 sec.)	94	95	36.9	37.3		
	No function	96	97	37.6	38.0		
	Tilt inversion: Off (3 sec.)	98	99	38.4	38.8		
	Tilt inversion: On (3 sec.)	100	101	39.2	39.6		
	No function	102	105	40.0	41.2		
	Tilt disable: Off (3 sec.)	106	107	41.6	42.0		
	No function	108	109	42.4	42.7		
	Tilt motor current disabled (3 sec.)	110	111	43.1	43.5		
	No function	112	129	43.9	50.6		
	Performance: Fast (3 sec.)	130	131	51.0	51.4		
	Performance: Normal (3 sec.)	132	133	51.8	52.2		
	Performance: Smooth (3 sec.)	134	135	52.5	52.9		
	No function	136	137	53.3	53.7		

7 ctd.	Control / Settings (continued)	White point 8000 K (3 sec.)	138	139	54.1	54.5	0	Snap
		White point 6500 K (3 sec.)	140	141	54.9	55.3		
		White point 5600 K (3 sec.)	142	143	55.7	56.1		
		White point 4200 K (3 sec.)	144	145	56.5	56.9		
		White point 3200 K (3 sec.)	146	147	57.3	57.6		
		No function	148	149	58.0	58.4		
		Subfixture mode: Normal (3 sec.)	150	151	58.8	59.2		
		Subfixture mode: Independent (3 sec.)	152	153	59.6	60.0		
		No function	154	165	60.4	64.7		
		Color mode: RGB [1] (3 sec.)	166	167	65.1	65.5		
		Color mode: RGBL [2] (3 sec.)	198	169	77.6	66.3		
		Color mode: x:y [3] (3 sec.)	170	171	66.7	67.1		
		No function	172	181	67.5	71.0		
		iQ gamut: Full (3 sec.)	182	183	71.4	71.8		
		iQ gamut: Rec. 2020 (3 sec.)	184	185	72.2	72.5		
		iQ gamut: Rec. 706 (3 sec.)	186	187	72.9	73.3		
		No function	188	189	73.7	74.1		
		Hibernation Off (3 sec., fixture will reset)	190	191	74.5	74.9		
		Hibernation On (3 sec.)	192	193	75.3	75.7		
		No function	194	215	76.1	84.3		
		PWM Optimal (3 sec.)	216	217	84.7	85.1		
		PWM High 1 (3 sec.)	218	219	85.5	85.9		
		PWM High 2 (3 sec.)	220	221	86.3	86.7		
		PWM Max. (3 sec.)	222	223	87.1	87.5		
		No function	224	229	87.8	89.8		
		Save as User Settings Preset 1 (3 s.)	230	231	90.2	90.6		
		Save as User Settings Preset 2 (3 s.)	232	233	91.0	91.4		
		Save as User Settings Preset 3 (3 s.)	234	235	91.8	92.2		
		No function	236	237	92.5	92.9		
		Load User Settings Preset 1 (3 sec.)	238	239	93.3	93.7		
		Load User Settings Preset 2 (3 sec.)	240	241	94.1	94.5		
		Load User Settings Preset 3 (3 sec.)	242	243	94.9	95.3		
		Load Settings Default (3 sec.)	244	245	95.7	96.1		
		No function	246	249	96.5	97.6		
		Reset tilt (3 sec.)	250	251	98.0	98.4		
		Reset head (3 sec.)	252	253	98.8	99.2		
		Reset ALL (3 sec.)	254	255	99.6	100		

To reduce the risk of accidentally changing settings, the commands on the Control / Settings channel must be held for a certain time before they are executed. The above table indicates the number of seconds that you must hold a command.

12. Key to conversion of x and y coordinates

The following formulas are used when converting DMX values to x/y coordinates on the RGB and RGBL color mixing channels:

8-bit

$$\text{DMX } x = \frac{x \text{ co-ordinate} \times 255}{0.8}$$

$$\text{DMX } y = \frac{y \text{ co-ordinate} \times 255}{0.8}$$

16-bit

$$\text{DMX } x = \frac{x \text{ co-ordinate} \times 65535}{0.8}$$

$$\text{DMX } y = \frac{y \text{ co-ordinate} \times 65535}{0.8}$$

13. Color wheel specifications

The following table gives the color gamut co-ordinates of the color presets available on the color wheel effect.

Filter 004, Medium Bastard Amber	0.37;0.335
Filter 019, Fire	0.664;0.31
Filter 025, Sunset Red	0.566;0.359
Filter 026, Bright Red	0.712;0.281
Filter 036, Medium Pink	0.36;0.268
Filter 049, Medium Purple	0.283;0.101
Filter 058, Lavender	0.212;0.099
Filter 068, Sky Blue	0.151;0.128
Filter 088, Lime Green	0.356;0.511
Filter 089, Moss Green	0.259;0.547
Filter 090, Dark Yellow Green	0.184;0.641
Filter 102, Light Amber	0.434;0.44
Filter 103, Straw	0.336;0.359
Filter 106, Primary Red	0.699;0.285
Filter 111, Dark Pink	0.389;0.215
Filter 115, Peacock Blue	0.134;0.296
Filter 117, Steel Blue	0.223;0.278
Filter 118, Light Blue	0.149;0.113
Filter 121, Filter Green	0.302;0.534
Filter 122, Fern Green	0.234;0.543
Filter 124, Dark Green	0.123;0.586
Filter 126, Mauve	0.287;0.082
Filter 128, Bright Pink	0.401;0.151
Filter 131, Marine Blue	0.199;0.305
Filter 132, Medium Blue	0.137;0.11
Filter 134, Golden Amber	0.501;0.371
Filter 135, Deep Golden Amber	0.667;0.326
Filter 136, Pale Lavender	0.288;0.254
Filter 137, Special Lavender	0.231;0.175
Filter 138, Pale Green	0.331;0.433
Filter 140, Summer Blue	0.201;0.245
Filter 141, Bright Blue	0.129;0.159
Filter 143, Pale Navy Blue	0.17;0.205
Filter 147, Apricot	0.446;0.381
Filter 148, Bright Rose	0.482;0.238
Filter 152, Pale Gold	0.37;0.332
Filter 154, Pale Rose	0.35;0.318

Filter 157, Pink	0.457;0.272
Filter 162, Bastard Amber	0.348;0.328
Filter 164, Flame Red	0.659;0.302
Filter 165, Daylight Blue	0.159;0.158
Filter 169, Lilac Tint	0.294;0.281
Filter 170, Deep Lavender	0.278;0.211
Filter 172, Lagoon Blue	0.141;0.22
Filter 180, Dark Lavender	0.191;0.072
Filter 182, Light Red	0.67;0.313
Filter 194, Surprise Pink	0.24;0.183
Filter 197, Alice Blue	0.164;0.118
Filter 201, Full C.T. Blue	0.228;0.233
Filter 202, Half C.T. Blue	0.261;0.273
Filter 203, Quarter C.T. Blue	0.285;0.294
Filter 204, Full C.T. Orange	0.437;0.392
Filter 206, Quarter C.T. Orange	0.346;0.34
Filter 219, Fluorescent Green	0.219;0.334
Filter 247, Filter Minus Green	0.325;0.279
Filter 248, Half Minus Green	0.317;0.297
Filter 281, Three Quarter C.T. Blue	0.239;0.258
Filter 285, Three Quarter C.T. Orange	0.4;0.387
Filter 352, Glacier Blue	0.171;0.19
Filter 353, Lighter Blue	0.193;0.246
Filter 506, Madge	0.662;0.337
Filter 778, Millennium Gold	0.606;0.382
Filter 793, Vanity Fair	0.419;0.17
Filter 798, Chrysalis Pink	0.191;0.061

--GLP--